

What's in the box?


In addition to this guide, the package includes the following items:



Power Jack Cable



tWF Device

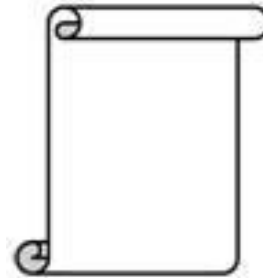

Quick Start

tWF Series Getting Started / User Manual / Utility

- **User Manual**

ftp://ftp.icpdas.com.tw/pub/cd/twf_cd/twf_dio/manual/

- **PC Utility**

ftp://ftp.icpdas.com.tw/pub/cd/twf_cd/twf_dio/pcutility/

ftp://ftp.icpdas.com.tw/pub/cd/twf_cd/twf_dio/pcscanner/


- **Android APP**

ftp://ftp.icpdas.com.tw/pub/cd/twf_cd/twf_dio/androidapp/

- **Website**

http://www.icpdas.com/root/product/solutions/remote_io/rs-485/twf-series/twf-series_selection.html

Getting Start

1. After received your device, check the package include. 
2. Power up your device by using power jack or AC adapter with DC9V~48V supply.
3. The Blue LED will turn on when it's power on.
4. Whatever using PC/NB or Android device, find the tWF Series AP mode default SSID that show as below,
 - a. tWF-PD4R3-xxxxxx
 - b. tWF-PD4SR2A-xxxxxx
 - c. tWF-PD4SR2D-xxxxxx
 - d. tWF-PD8-xxxxxx
 - e. tWF-R6-xxxxxx

Note: xxxxxx is the last 6 character MAC address of your device.

5. Connect your PC/NB or Android device to this SSID, default is Open no key request.




6. After connected, the Red LED will also turn on, open your Web Browser, fill the URL with “192.168.77.1”(default IP) and enter.





7. A while you will get a dialog for Account & Password, both Account & Password are “admin” for default.

Account always be “admin”, Password can be modify in setup with 5 character (max)

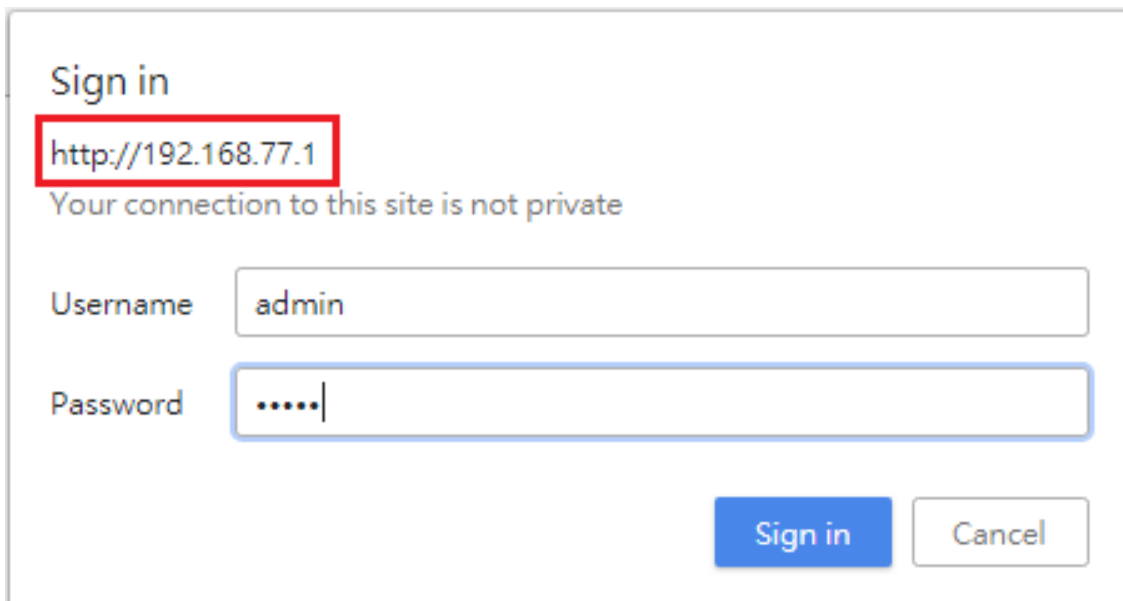A screenshot of a "Sign in" dialog box. The title is "Sign in". Below the title is a text field containing the URL "http://192.168.77.1", which is highlighted with a red border. Below the URL field is the text "Your connection to this site is not private". There are two input fields: "Username" with the text "admin" and "Password" with five asterisks "*****". At the bottom right, there are two buttons: "Sign in" (blue) and "Cancel" (white).

8. After Sign in the web site the Control Panel will show as below, you can click the Digital Output to control the device, also monitoring the Digital Input.

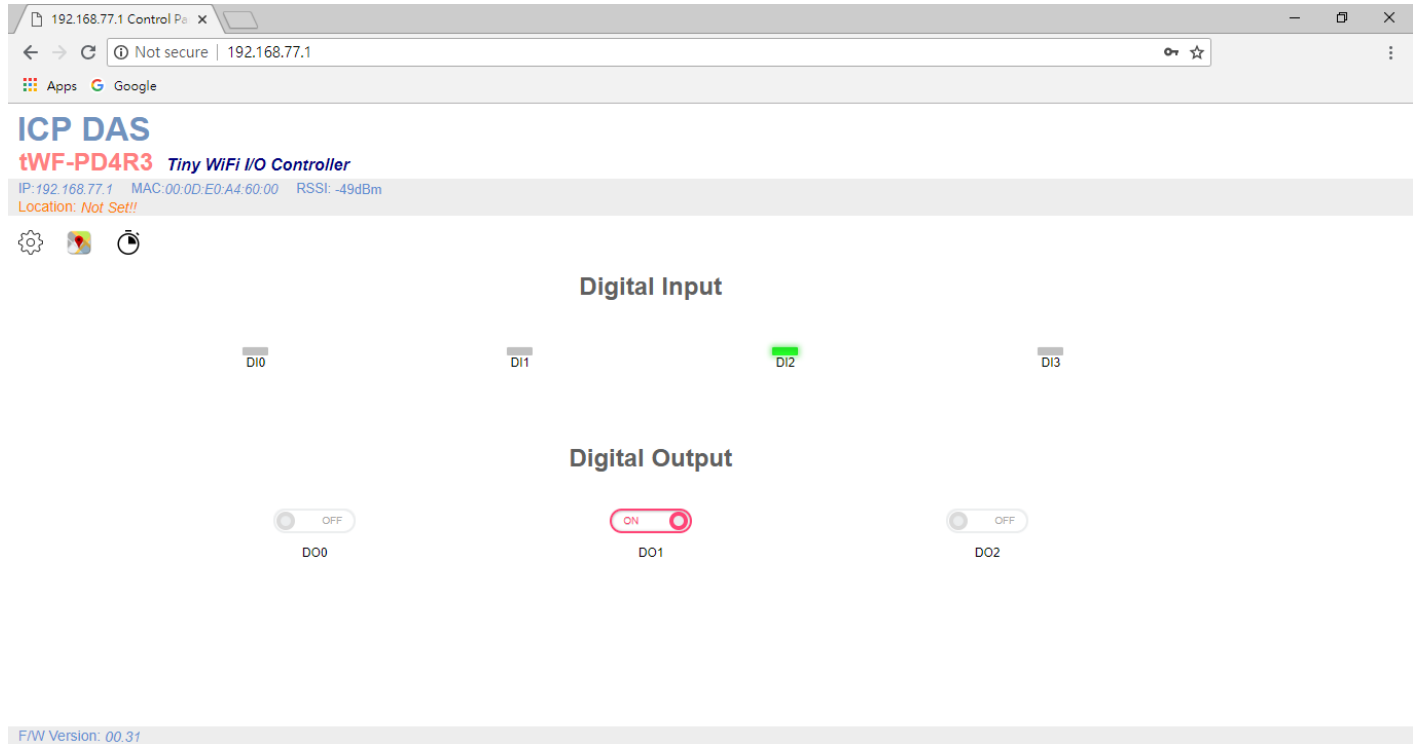

9. If you are going to change or modify any setting on this module, press the Setup icon , to enter setup page.

10. For further information please reference to “tWF Digital I/O series manual”.



If there is any other question, please feel free to contact us.

Email: service@icpdas.com