

# Industrial Tri-band 3G Modem GTM-201-3GWA

#### **Quick Start**

#### **Package Checklist**


The package includes the following items:


- One GTM-201-3GWA hardware module
- One Quick Start (this manual)
- One companion CD
- One USB Type A to Type B connector cable (CA-USB18)
- One 3G/GSM antenna (ANT-421-02)
- One GPS antenna (ANT-115-03) (only for GTM-201P-3GWA)

# Related Documents and Software Utilities Documents

- User manual: GTM-201-3GWA User Manual
- Quick start: GTM-201-3GWA QuickStart
- CD: \napdos\3G\_Modem\GTM-201-3GW A\Manual
- http://ftp.icpdas.com/pub/cd/usbcd/napdos/3G\_modem/ GTM-201-3GWA/manual/

#### View of the GTM-201-3GWA Panel

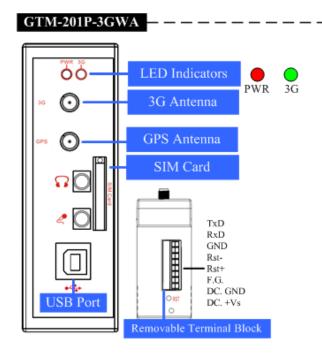


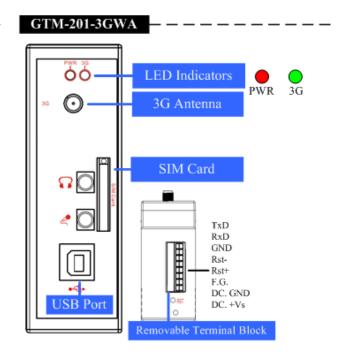

GTM-201-3GWA Ver 1.00

www.ipc2u.ru www.ipc2u.de www.ipc2u.com


## **Pin Assignments**

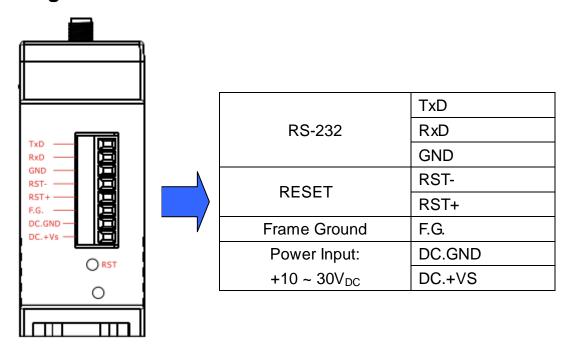

#### > Reset Wire Connection

Input Type	Reset State ON	Reset State OFF
Reset	RST-	RST-
Input	RST+	RST+

Reset Input	
ON Voltage Level	+3.5 V <sub>DC</sub> ~ +30 V <sub>DC</sub>
OFF Voltage Level	+1 V <sub>DC</sub> max.

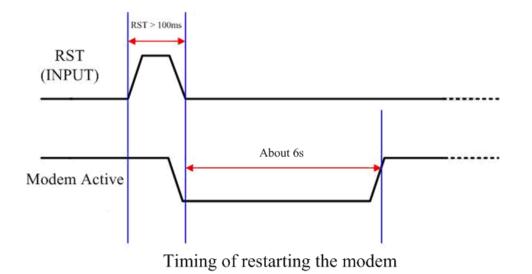


GTM-201-3GWA Ver 1.00

www.ipc2u.ru www.ipc2u.de www.ipc2u.com

2

#### > Connect the GTM-201-3GWA to PC

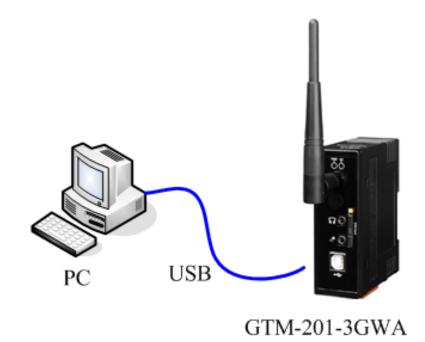

#### > SIM card and Antenna Installation





GTM-201-3GWA Ver 1.00


www.ipc2u.ru www.ipc2u.de www.ipc2u.com

3

#### USB Driver Installation(XP)

Step1. Double Click GTM-201-3GWA driver "GTM-201-3GWA.exe" to install the driver.

Step2. Click "Next".

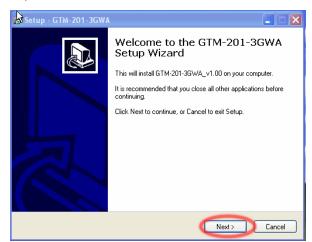

Step3. Click "Next" until finishing installation



Step4. Connect the USB of GTM-201-3GWA with the PC

Step5. The "Found New Hardware Wizard" window will pop-out. Please click "Next" until finishing installation

\*All 5 items for installation:

"GTM-201-3GWA Diagnostics"

"GTM-201-3GWA NMEA"

"GTM-201-3GWA AT Port"

"GTM-201-3GWA Modem"


"GTM-201-3GWA Wireless HS-USB Ethernet Adapter"



Step6. Finish the all install steps. Please open "Device manager", and you will found 5 new items in your computer.

The "GTM-201-3GWA AT Port" is a "AT command port" for GSM library.

The "GTM-201-3GWA Modem" is a Modem for dial-up to 3G/GPRS Network.

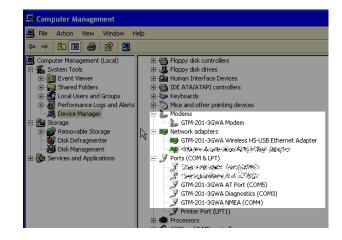

GTM-201-3GWA Ver 1.00

www.ipc2u.ru www.ipc2u.de www.ipc2u.com

### Quick Test (Hyper Terminal)

Step1. Start → All Programs →
Accessories → Communications →
Hyper Terminal → Input new connection
name → Click "OK" → Select
"GTM-201-3GWA AT PORT" for USB or
your PC serial port for RS-232
communication → Click "OK"



## Create a new modem connection on PC (for RS-232 dial-up)

Step1. Control Panel → Double-click "Phone and Modem Options" → Modem → Click "Add"

Step2. Select "Standard Modem Types" → Select "Standard 19200 bps Modem" → Click "Next"

Step3. Select your COM Port to connect the modem → Click "Next"→Click"Finish"

www.icp-das.ru


www.ipc2u.ru

Step2. Please refer to the following settings

!	5
Bits per second	115200
Data bits	8
Parity	None
Stop bits	1
Flow control	None

Step3. File → Properties → Settings → Click "ASCII Setup..." → Select "Echo typed character locally" → OK

Step4. Input "AT" and press "Enter", then you will receive "AT OK"

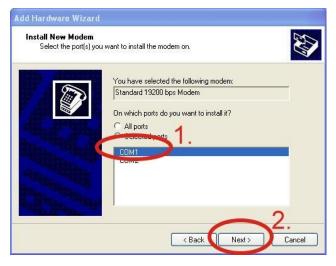

Step4. Control Panel → Double-click "Phone and Modem Options" → Modem

→ Select "Standard 19200 bps Modem"

www.ipc2u.com


→ Click "Properties"

www.ipc2u.de

5 GTM-201-3GWA Ver 1.00


Step5. Control Panel → Double-click "Phone and Modem Options" → Modem

- → Select "Standard 19200 bps Modem"
- → Click "Properties" → Modem → Maximum Port Speed → 115200

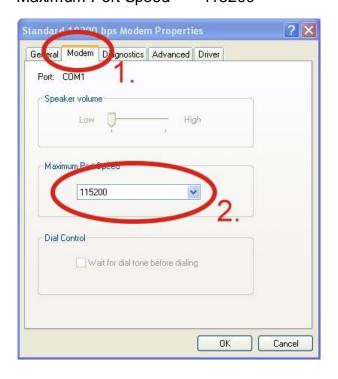

Step7. Diagnostics → Query Modem → Click "OK"

Note: If user queries modem that gets a Error, please try again.

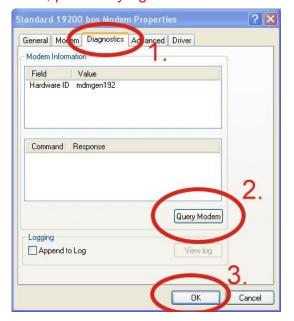

Step6. Advanced → Extra initialization commands:


Note: GPRS's APN must be provided from your Telecom. CO., LTD.

For example in Taiwan:


AT+CGDCONT=1,"IP","INTERNET"

For example in China:

AT+CGDCONT=1,"IP"," CMNET"

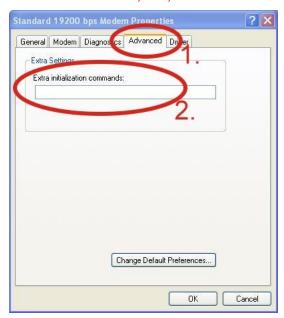

Step8. Click "OK"

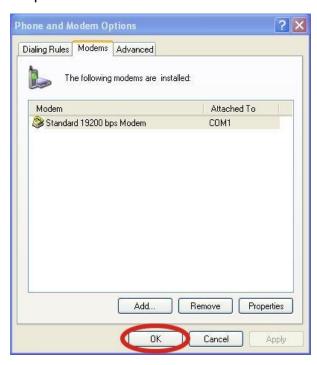

GTM-201-3GWA Ver 1.00

www.ipc2u.ru www.icp-das.ru www.ipc2u.de www.ipc2u.com

# Create a new dial-up on a PC

Step1. Control Panel → Network


Connections → Click "Create a new

connection" → Click "Next" → Select

"Connect to the Internet" → Click "Next"



Step2. Select "Connect using a dial-up modem" → Click "Next"

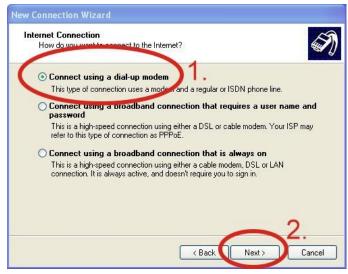

Step3. Your GPRS's name → Click "Next" → Phone Number: → Click "Next" Note: Phone Number must be provided from your Telecom. CO., LTD.

For example in Taiwan: \*99\*\*\*1#



Step4. GPRS's User name and GPRS's Password → Click "Next" → Click "Finish"

Note: GPRS's User name and GPRS's Password must be provided from your Telecom. CO., LTD.



GTM-201-3GWA Ver 1.00

www.ipc2u.ru www.ipc2u.de www.ipc2u.com

Step5. Control Panel → Network Connections →

Click "Your GPRS's name" → File

- → Properties → General →
- → Click "Configure"

Select "GTM-201-3GWA Modem"

(\* Select "Standard 19200 bps Modem"

For RS-232)



Step6.Maximum speed(bps) →
Select "115200" →
Enable hardware flow control (Note)
→ Click "OK"
Note:

GTM-201-3GWA Please don't select "Enable hardware flow control"



Step7. Contral Panel → Network Connections → Double-Click "Your GPRS's name" → Click "Dial"



Step8. If you connect to internet successfully, your toolbar has new logo

# Technical Support

- 1. ICP DAS Service : service@icpdas.com
- **2.** GTM-201-3GWA software Website: http://m2m.icpdas.com/gtm-201-3gwa.html