

---

# RCM-MTCP

Redundant Communication Module

Modbus/TCP slave

## Software User Manual



## **Preface**

### **Warranty**

All products manufactured by ICP DAS are under warranty regarding defective materials for a period of one year from the date of delivery to the original purchaser.

### **Warning**

ICP DAS assumes no liability for damages resulting from the use of this product. ICP DAS reserves the right to change this manual at any time without notice. The information furnished by ICP DAS is believed to be accurate and reliable. However, no responsibility is assumed by ICP DAS for its use, or for any infringements of patents or other rights of third parties resulting from its use.

### **Copyright**

Copyright © 2024 by ICP DAS CO., LTD. All rights are reserved.

### **Trademark**

The names used for identification only may be registered trademarks of their respective companies.

## Revision History

---

Revision	Date	Description of Change
1.00	2024/01/23	Document release

---

# Table of Contents

SECTION 1 INTRODUCTION .....	6
1.1 OVERVIEW.....	6
1.2 INTRODUCTION OF MODBUS .....	6
1.3 INTRODUCTION OF SCADA .....	7
1.4 FEATURE OF RCM-MTCP .....	9
1.5 SYSTEM ARCHITECHTURE .....	10
1.6 LIST OF SUPPORTED MODBUS COMMAND.....	10
1.7 MODBUS ADDRESS MAPPING.....	11
1.8 CONFIGURATION COMMAND.....	11
SECTION 2 GETTING STARTED .....	12
2.1 UTILITY OVERVIEW.....	12
2.2 UTILITY INSTALLATION AND UNINSTALLATION.....	13
2.2.1 Utility Installation.....	13
2.2.2 Utility Uninstallation.....	15
2.3 HARDWARE CONFIGURATION.....	18
2.4 PARAMETER CONFIGURATION .....	21
2.4.1 Parameter for Digital Input.....	21
2.4.2 Parameter for Digital Output.....	22
2.4.3 Parameter for Analog Input .....	22
2.4.3.1 General Analog Input Module .....	23
2.4.3.2 Thermocouple.....	23
2.4.3.3 RTD .....	24
2.4.4 Parameter for Analog Output.....	25
2.4.5 Parameter for Counter.....	26
2.4.6 Common Parameters .....	26
2.5 I/O DATA MONITORING.....	27
2.6 SAVING/LOADING PARAMETER .....	29
2.7 EVENT LOG.....	29
2.8 SYSTEM SUMMARY .....	30
SECTION 3 MODBUS COMMAND .....	31
3.1 "READ COIL STATUS" (0x01) .....	32
3.2 "READ INPUT STATUS" (0x02) .....	32
3.3 "READ HOLDING REGISTERS" (0x03) .....	33
3.4 "READ INPUT REGISTERS" (0x04).....	33
3.5 "FORCE SINGLE COIL" (0x05) .....	34
3.6 "FORCE MULTIPLE COILS" (0x0F).....	35

---

3.7 "PRESET MULTIPLE REGISTERS" (0x10) .....	36
3.8 EXCEPTION RESPONSES.....	36
SECTION 4 MODBUS ADDRESSES MAPPING.....	38
4.1 CHANNEL VALUE.....	38
4.1.1 Digital Input (Supported FC: 0x02).....	39
4.1.2 Digital Output (Supported FC: 0x01, 0x05, 0x0F) .....	39
4.1.3 Analog Input (Supported FC: 0x04) .....	40
4.1.4 Analog Output (Supported FC: 0x03, 0x06, 0x10).....	40
4.1.5 Counter (Supported FC: 0x04).....	41
4.1.6 PWM (Supported FC: 0x03, 0x06, 0x10) .....	42
4.1.7 HART .....	43
4.1.7.1 HART Send (Supported FC: 0x10) .....	43
4.1.7.2 HART Receive (Supported FC: 0x04) .....	44
4.2 SYSTEM INFORMATION.....	45
4.2.1 Statuses .....	45
4.2.2 System information .....	49
4.3 SLOT INFORMATION.....	53
SECTION 5 CONFIGURATION COMMAND .....	55
5.1 SYSTEM CONFIGURATION COMMAND .....	55
5.1.1 RTC time (0x0000).....	56
5.2 I/O CONFIGURATION COMMAND .....	57
5.2.1 I/O module port enable (0x0000) .....	58
5.2.2 I/O module slot status (0x0001) .....	59
5.2.3 I/O module redundant enable (0x0010) .....	60
5.2.4 I/O module cable break-off enable (0x0011) .....	61
5.2.5 DO power-on & safety value (0x0020).....	62
5.2.6 DO power-on & safety mode (0x0021) .....	63
5.2.7 AO power-on value (0x0030) .....	64
5.2.8 AO safety value (0x0031).....	65
5.2.9 AO power-on & safety mode (0x0032).....	66
5.2.10 I/O module type code (0x0040) .....	67
5.2.11 TC/RTD low/high re-scaling value (0x0041) .....	68
5.2.12 I/O module alarm low/high limit (0x0042) .....	69
5.2.13 I/O module alarm enable (0x0043).....	70
5.2.14 TC CJC enable (0x0050) .....	71
5.2.15 Channel broken line detection (0x0051) .....	72
5.2.16 Counter clear (0x0060).....	73
5.2.17 Counter filter interval (0x0061).....	74
5.2.18 Counter filter / frequency / edge (0x0062).....	75
5.2.19 Counter input impedance & limit (0x0063) .....	76

---

---


5.2.20 PWM reference time (0x0070) .....	77
5.2.21 PWM offset time (0x0071).....	78
5.2.22 PWM cyclic & duty (0x0072) .....	79
5.2.23 PWM safety mode (0x0073) .....	80
APPENDIX A .....	81
ANALOG INPUT TYPE CODE.....	81
ANALOG OUTPUT TYPE CODE.....	82
PULSE INPUT TYPE CODE .....	82
APPENDIX B.....	83
HOW TO MODIFY IP ADDRESS .....	83
Normal mode.....	83
Hardware mode .....	83
HOW TO UPDATE THE RCM-MTCP FIRMWARE.....	86
HOW TO UPDATE THE IOM MODULE FIRMWARE.....	90
FAQ .....	92

# Section 1 Introduction

## 1.1 Overview

Modbus is a well-known protocol in the industrial manufacturing and environment monitoring fields. It is suitable for master-slave or query-response distributed I/O applications. RCM-MTCP is a communication interface with Modbus/TCP slave protocol. It is pre-installed with Modbus firmware and can be arranged in pairs or groups of I/O modules, like analog input, analog output, digital input, digital output and counter modules. Via Ethernet method, it can be used on industrial applications, like remote data acquisition, factory automation, monitoring system and power management...etc.

The RCM-MTCP supports redundant functionality. It allows maximum eight IO modules (four redundant IO pairs). The controllers, like PC, HMI or PLC, can communicate with RCM-MTCP to access I/O modules through Modbus/TCP.

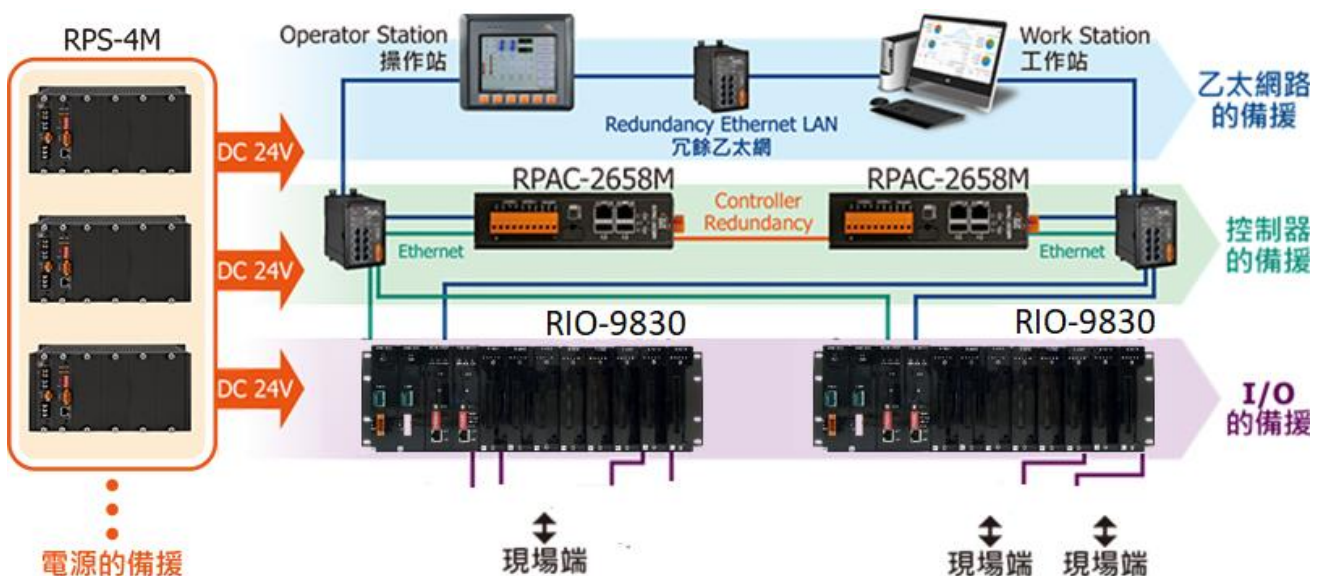

## 1.2 Introduction of Modbus

- What is Modbus?

Modbus is a communication protocol developed by MODICON Inc. in 1979. It's a truly open protocol and the most widely used network communication protocol in industrial automation field. SCADA and HMI software can easily integrate devices together through Modbus protocol.

- What is Modbus/TCP?

Modbus/TCP is variants of Modbus protocol. It was developed in 1999 to allow the Internet community to access Ethernet devices.

- **What software supports Modbus?**

Most of SCADA (Supervisor Control and Data Acquisition) and HMI softwares support Modbus. For example: Citect, ICONICS, iFIX, InduSoft, Intouch, Entivity Studio, Entivity Live, Entivity VLC, Trace Mode, Wizcon, Wonderware... etc

- **What are the benefits of using Modbus?**

- ✓ Open source, no license fees.
- ✓ Widely supported by SCADA and HMI software
- ✓ Easy to use
- ✓ Easily integrate variant devices
- ✓ Low development cost
- ✓ Wide knowledge base

- **Where to find resources about Modbus?**

- ✓ <http://www.modicon.com>

The web page of the original Modbus protocol inventor, MODICON Inc

- ✓ <http://www.modbus.org>

A community for Modbus

- ✓ <http://www.winsite.com/bin/Info?3088>

An ActiveX freeware to communicate with equipments via Modbus (RTU/ASCII) or Modbus/TCP

- ✓ <http://www.pmcrae.freemove.co.uk/readregu.html>

Some examples in C code for Linux Modbus/RTU communication


## 1.3 Introduction of SCADA

- **What is SCADA?**

The SCADA, known as Supervisor Control And Data Acquisition, is a production of automation and control system based on PCs. It is widely used in fields everywhere, e.g. power generation, water system, oil industry, chemistry, automobile industry. Each field requires different functions, but they all have the following features:



- Graphic interface
- Process simulation
- Real time and historic trend logging
- Alarm system
- Data acquisition and recording
- Data analysis
- Report generation

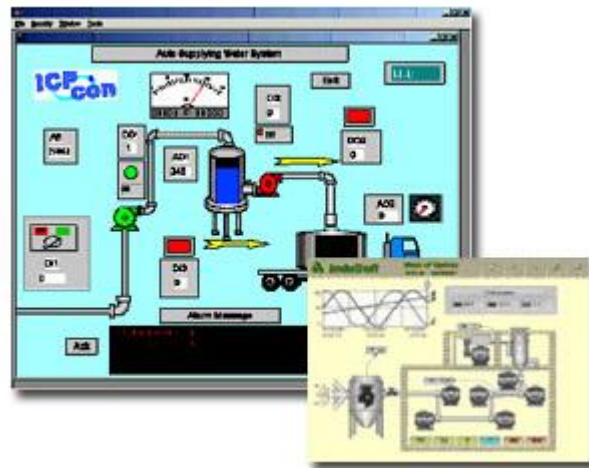

- **SCADA software accesses to hardware devices**

Methods that SCADA software uses to access to hardware devices can be easily classified into the following:

- ✓ **Standard communication protocol**

Common communication protocols used in the industrial field are:

ARCNET, CAN Bus, Device Net, Lon Works, Modbus, Profibus

If SCADA software and hardware devices use the same communication protocol, they can talk to each other without any extra software drivers.

- ✓ **Standard data exchange interface**

Common data exchange interfaces that used in the industrial field are:

DDE (Dynamic Data Exchange)


OPC (OLE for Process Control)

Using standard data exchange interfaces, SCADA software can indirectly communicate with hardware devices via DDE and OPC data exchange center. The advantage is that no matter hardware device supports standard communication protocols or not, manufacturers only need to provide one DDE or OPC driver in order to support most SCADA software.

- ✓ **Native driver**

A driver that has been developed for a specific device or purpose is called "Native Driver". The advantage of using a native driver is that you can improve the execution process compared to using a standard data exchange interface. The main drawback is lack of compatibility as manufacturers need to provide specific drivers for specific SCADA software.

Using one of above methods, you can combine SCADA software and hardware devices. The communication structure is as below:

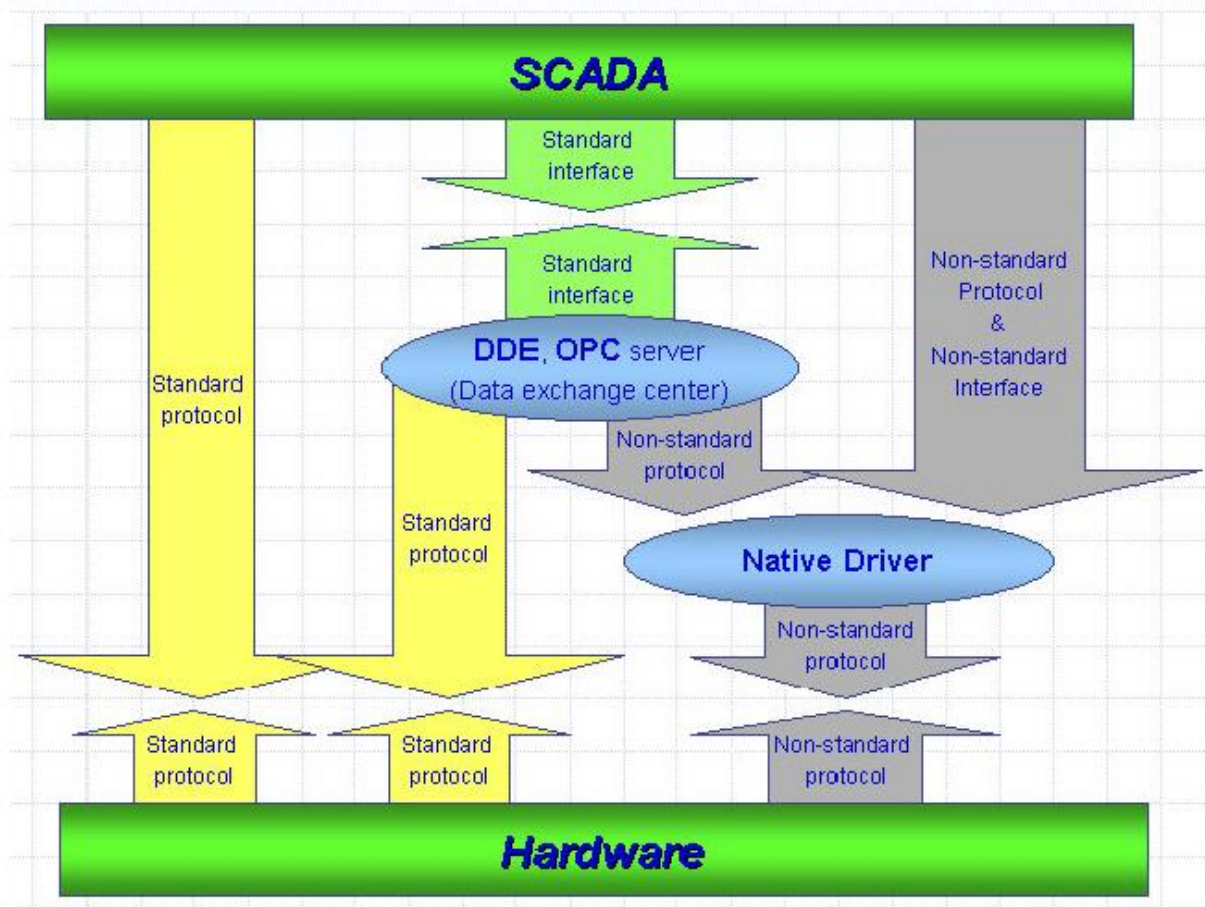

- Famous SCADA software

Citect, ICONICS, iFix, InduSoft, Intouch, Entivity Studio, Entivity Live, Entivity VLC, Trace Mode, Wizcon, Wonderware, ...etc.

## 1.4 Feature of RCM-MTCP

- ✓ Access I/O through Modbus/TCP slave

RCM-MTCP is act as a device with Modbus/TCP slave. You can simply use the utility tool to configure the device and I/O, and then create a connection from SCADA or HMI software to the RCM-MTCP.

- ✓ Hot-swappable

It is not necessary to shut down the power to replace or plug I/O modules. It brings a benefit to the whole system which can keep operating without any interruption.

### ✓ Auto-configuration


Configuration of I/O module can be pre-configured and store in the memory of the RCM-MTCP. When an I/O module is plugged, the RCM-MTCP will automatically check and restore configurations to each I/O module.

### ✓ Allow multi-connection accessing

The RCM-MTCP supports maximum 4 connections with each communication module as the same time.

## 1.5 System Architecture

The following figure is the system architecture of RIO-9830 with RCM-MTCP module. The upper level likes HMI, PLC and controllers that can access I/O by connecting with RCM-MTCP with Modbus/TCP protocol.

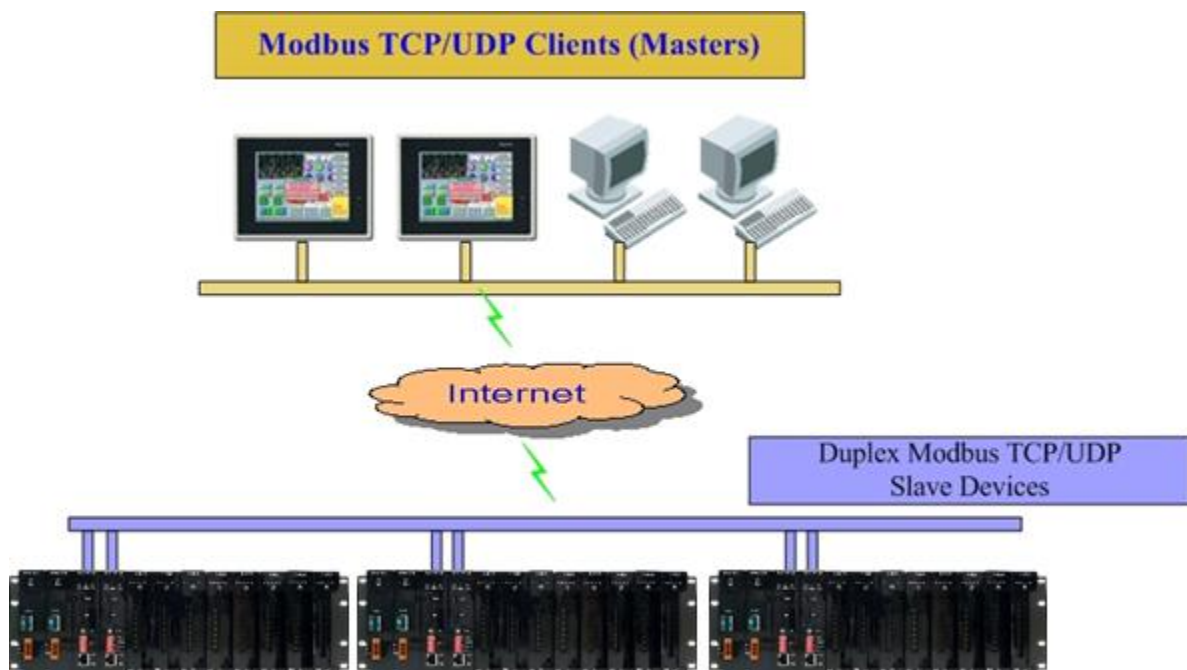

## 1.6 List of Supported Modbus Command

The slave address of RCM-MTCP is fixed to 1 in the definition of Modbus/TCP. The following table shows the supported function codes of RCM-MTCP. For more details please refer to [chapter 3](#).

---

Function Code	Modbus Command
0x01	Read coil status
0x02	Read input status
0x03	Read holding registers
0x04	Read input registers
0x05	Write single coil
0x06	Write single register
0x0F	Force multiple coils
0x10	Preset multiple registers

## 1.7 Modbus Address Mapping

The RCM-MTCP is a communication module with Modbus protocol. So, all of information is map into the address in the definition of Modbus. The detail of these address mapping can be refered to [chapter 4](#).

## 1.8 Configuration Command


There are many configurations, like I/O range, power-on value, safety value...etc, need to be set through Modbus protocol. The RCM-MTCP provides a pre-defined configuration command to configure all of configuration. The detail of the command is described in [chapter 5](#).

## Section 2 Getting Started

The RCM-MTCP is the interface to I/O modules. All of the information is listed in Modbus address for users. Users need to write a program to access all of the information. So, it is too difficult to get all of information or configure parameter instantly. ICPDAS provides a ready-to-use and easy-to-use utility to access all of the information for RIO-9830 system. Users can easily access information without programming. In this chapter, it will introduce utility which includes, installation, instruction.

### 2.1 Utility Overview

The following figure is a simple connection example. This example is divided into three parts, one is the Windows based PC installed utility, one is the Ethernet switch, and the other is RIO-9830 plugged RCM-MTCP. Therefore, the utility can access RIO-9830.

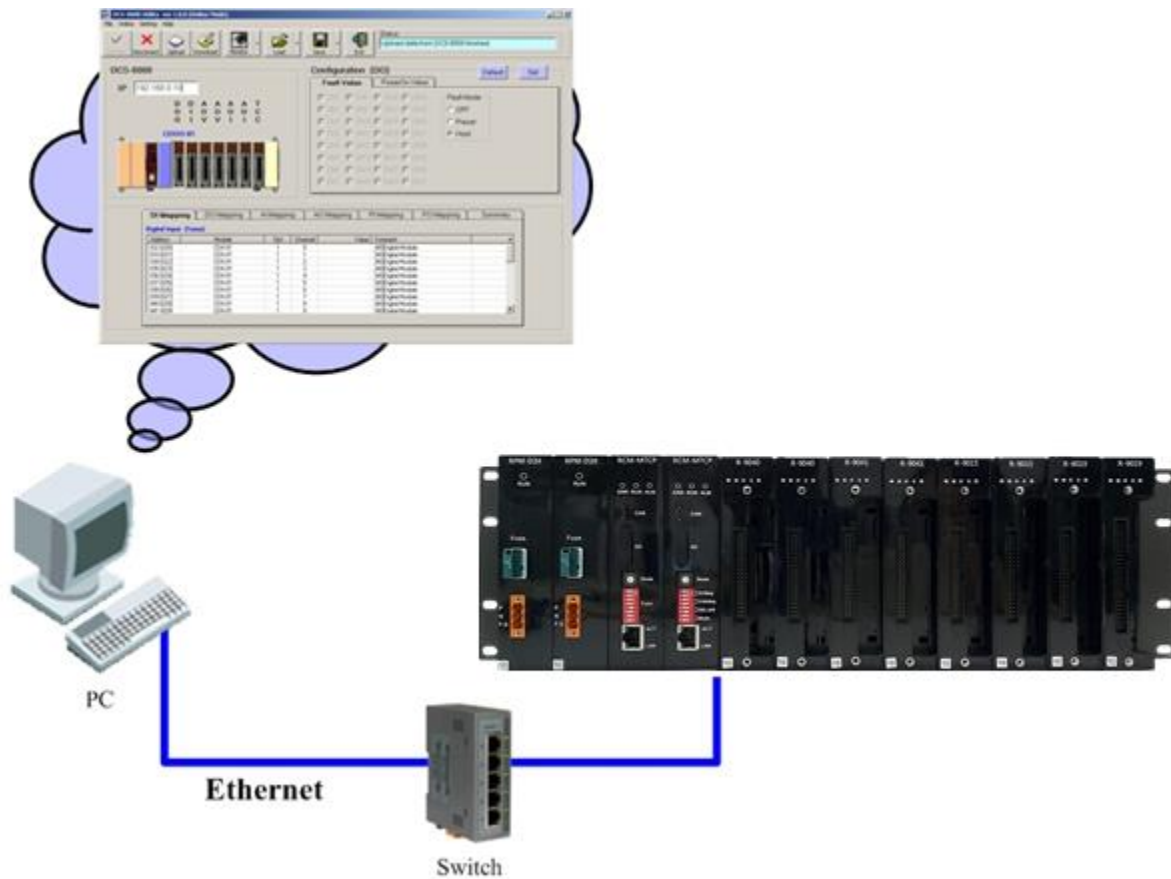


## 2.2 Utility Installation and Uninstallation

### 2.2.1 Utility Installation


**Step 1 :** Download the RIO-9830 Utility setup file from the web site.

**Step 2 :** Execute the setup.exe file to install RIO-9830 Utility.


**Step 3 :** A “Select Destination Location” window will pop up for the installation path. Here, default path is used. Click “Next” button to go on the next step.

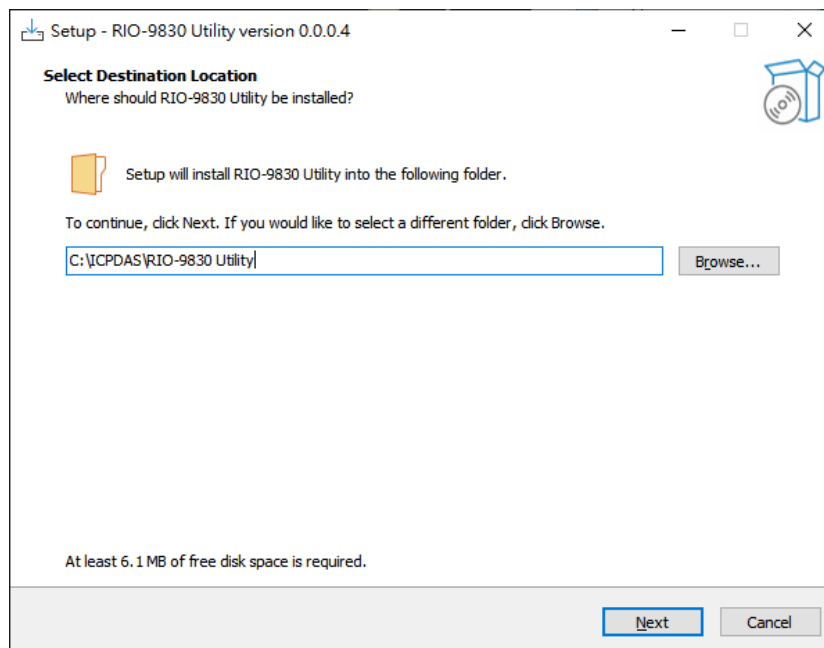


**Step 3 :** A “Select Additional Tasks” window will pop up for the setup perform. Here, default is used. Click “Next” button to go on the next step.

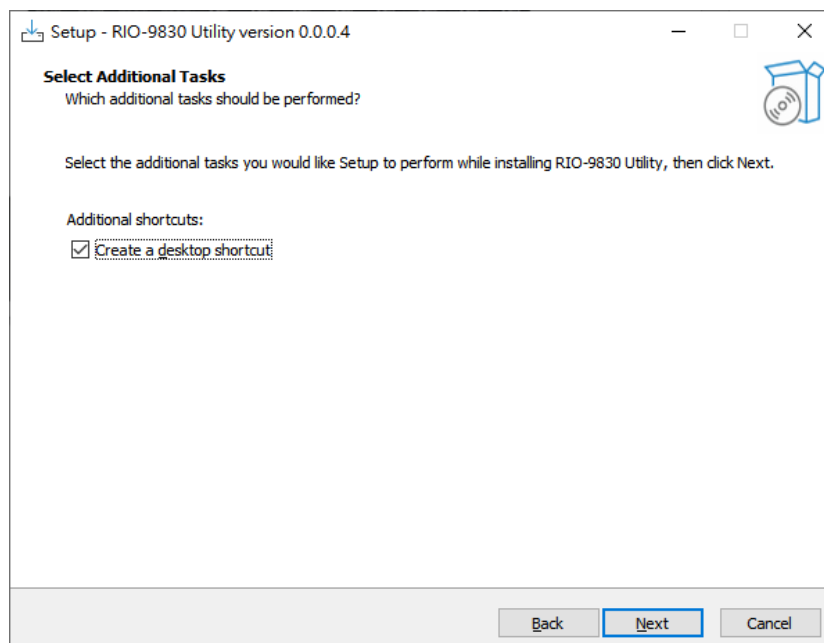


**Step 5 :** A “Ready to Install” is popped up. Click “Install” button.

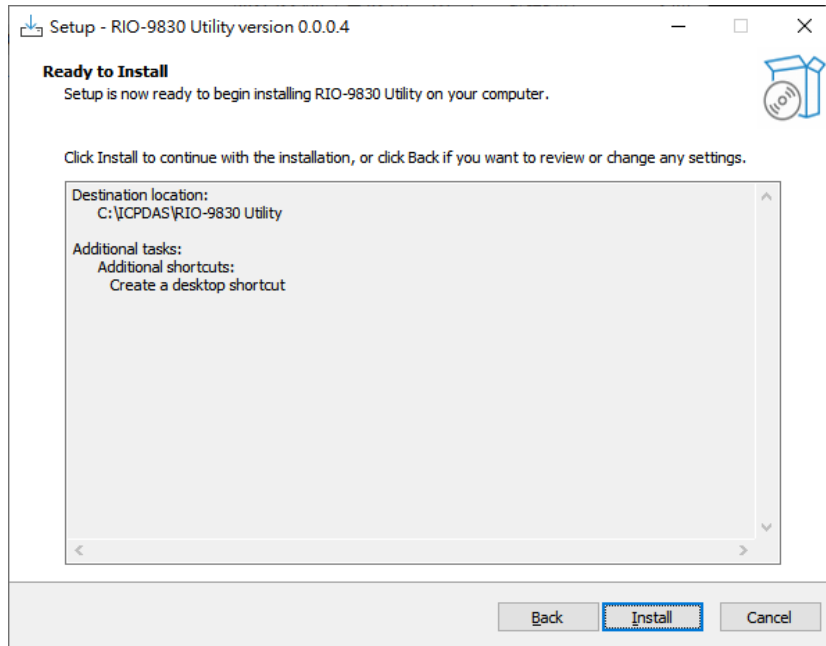

**Step 6 :** After finishing the process, a “Complete” window will pop up to prompt users that the successful completion of the installation. Then, click “Finish” button to exit.

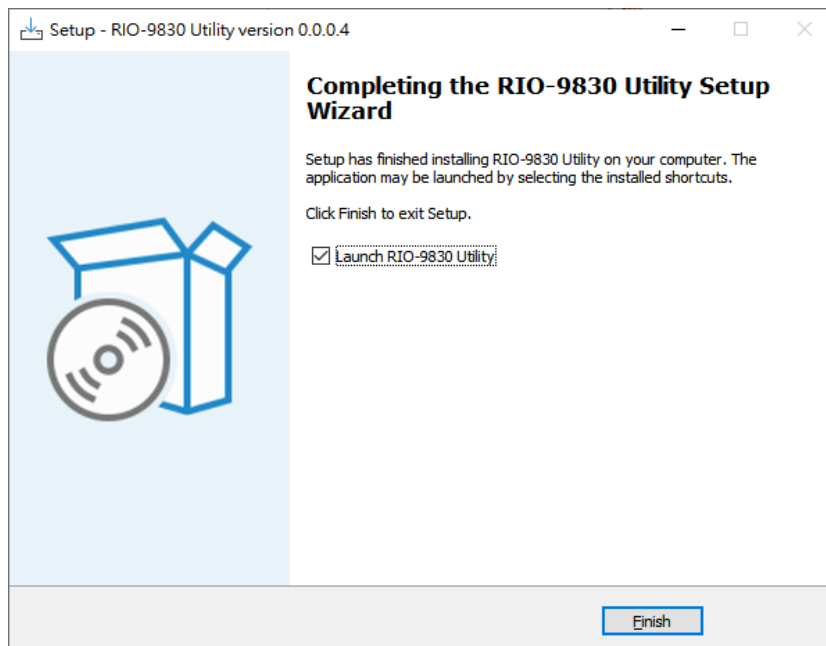

**Step 7 :** After finishing the installation of the RIO-9830 Utility, users can find RIO-9830 Utility in the “Start menu” as the following figure.

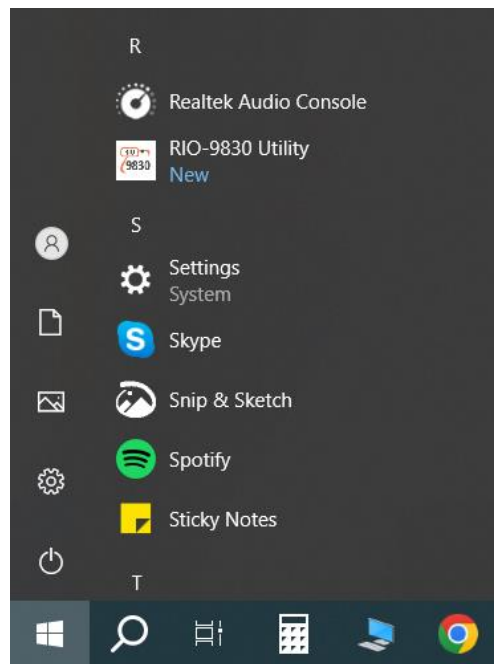


## 2.2.2 Utility Uninstallation

Following the steps, users can uninstall the RIO-9830 Utility software by the following steps:


**Step 1 :** Click "Start" in the task bar then selects the "Settings/Control Panel" .

**Step 2 :** Click the "Programs" button icon to open the dialog.

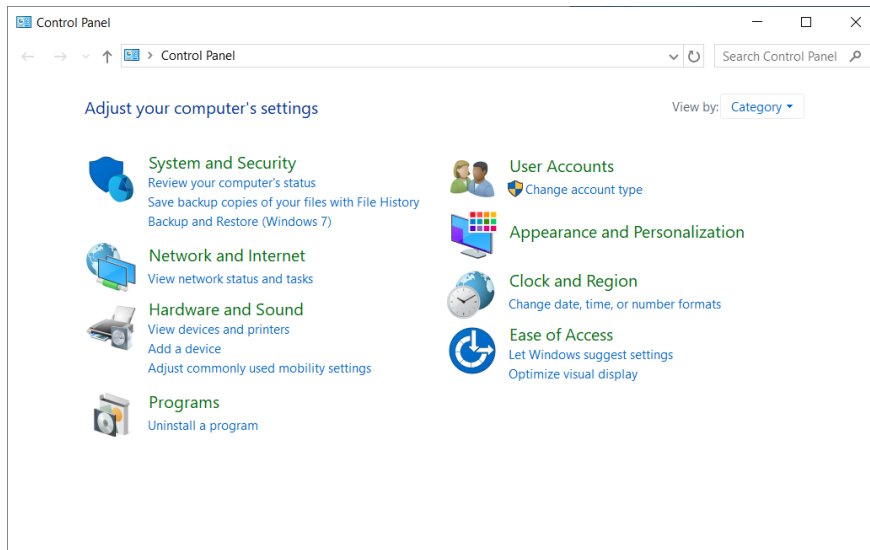


**Step 3 :** Click the "Programs and Features" button icon to open the dialog.




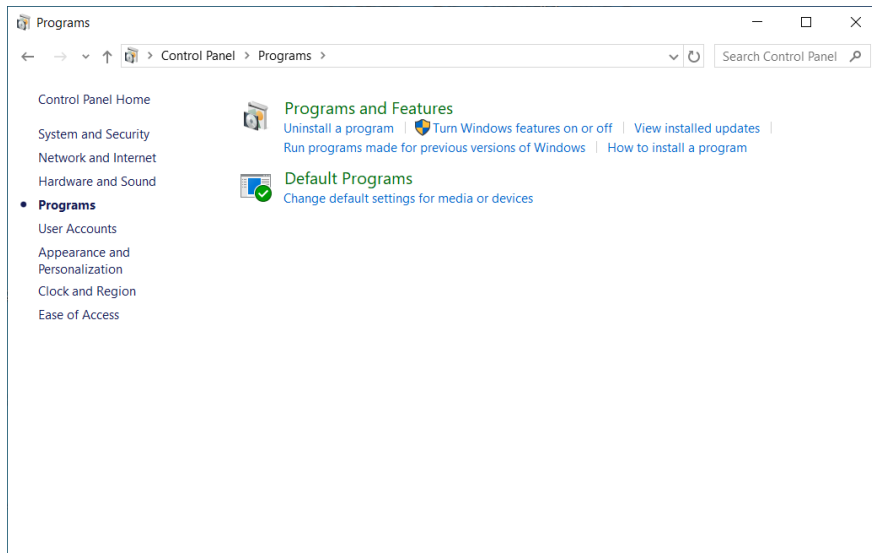


**Step 4 :** Find out the RIO-9830 Utility, and click the uninstall button.

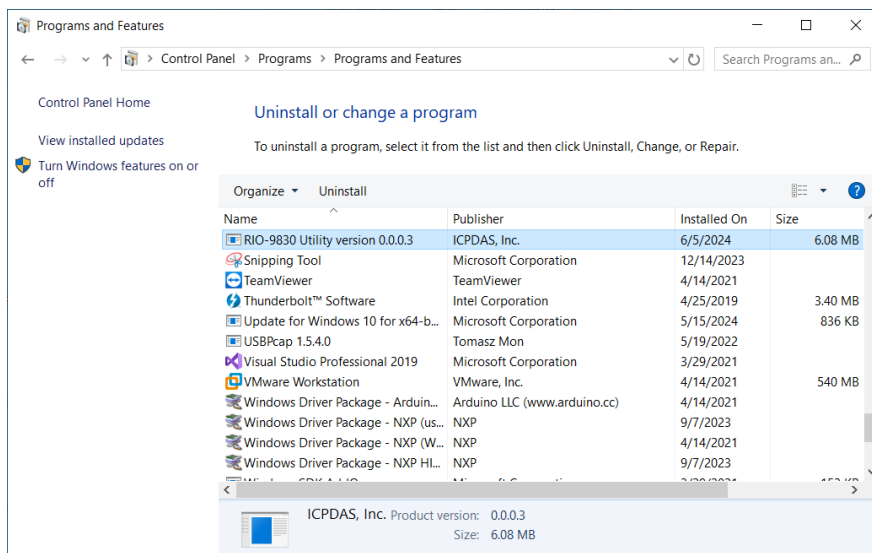


**Step 5 :** Click the button "Yes" to remove the Utility tool.

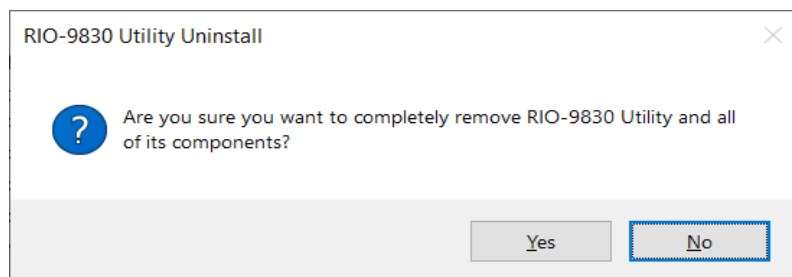

**Step 6 :** Remove RIO-9830 Utility.

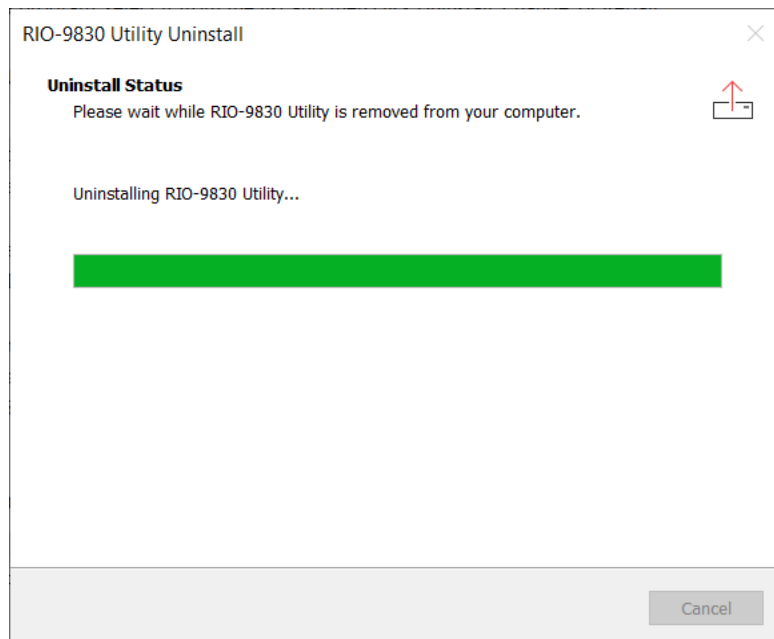

**Step 7 :** Finally, click the "OK" button to finish the uninstall process.

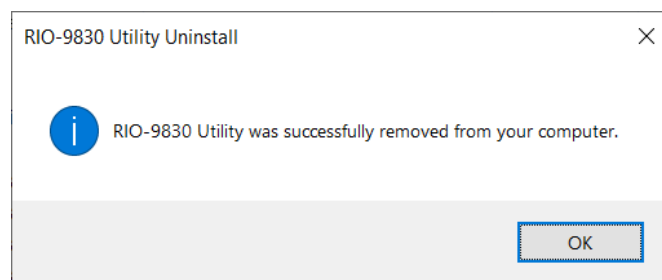


## 2.3 Hardware Configuration


When first connect/install the RIO-9830 system, you will need to make some adjustment for each setting to suit your requirements. The following instruction is the steps to configure RIO-9830 I/O and RCM-MTCP.

**Step 1 :** Configure the network settings (IP, Mask and Gateway) for the RCM-MTCP module.


- a. Connect PC to RCM-MTCP (The RCM-MTCP also can directly connect to PC without Ethernet switch)

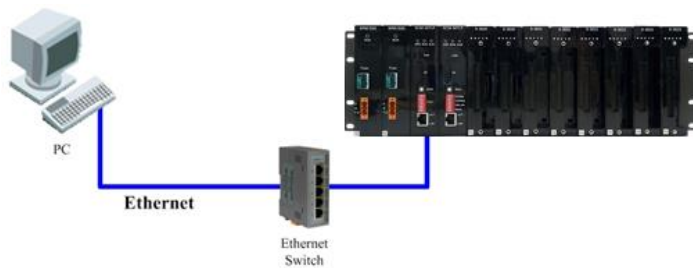

- b. RCM-MTCP dip switch positions 5 and 6 are set to OFF and then powered on, it will enter normal mode. In this mode, users can customize IP without being restricted by rotary switch.

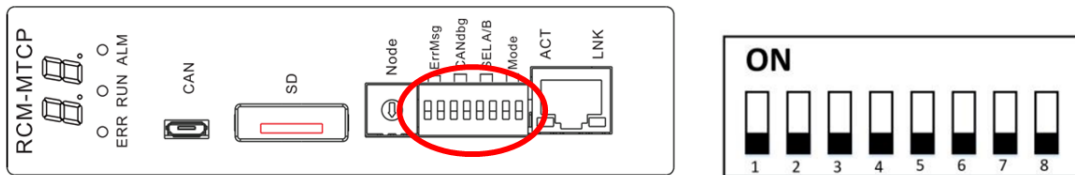


- c. Use MiniOS7 Utility tool to search the MCU module.

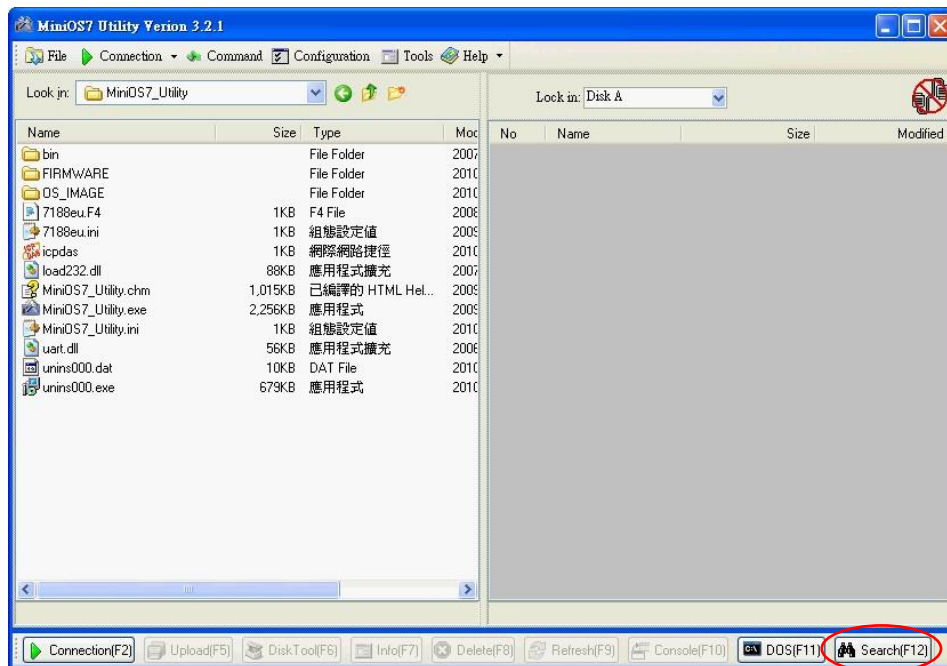

**NOTE:** To Use the MiniOS7, you must first install MiniOS7 Utility.

- d. Search the MCU and modify its IP/Gateway/Mask.

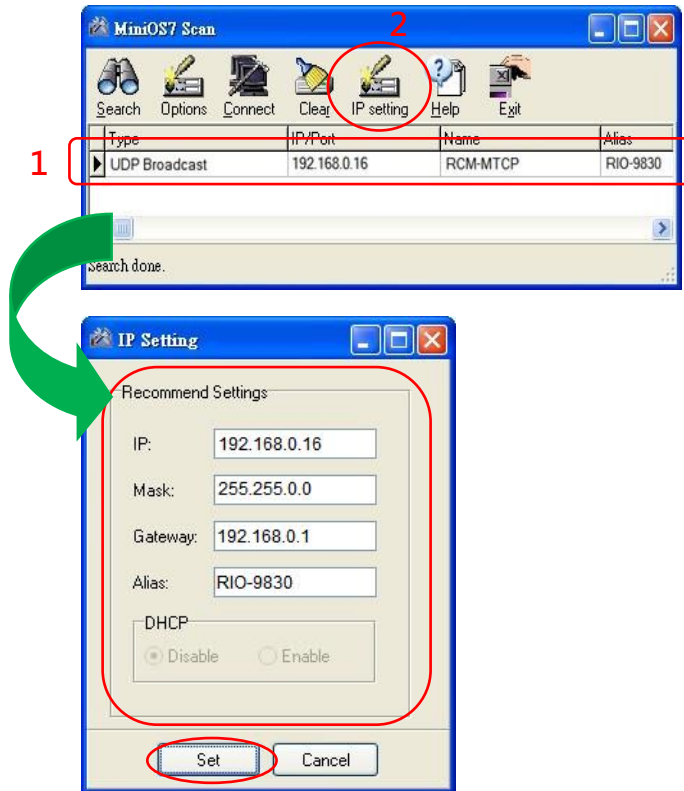


**Step 2 :** Connect to RIO-9830 controller via Ethernet.

Replace the default IP address with the IP address that you used in step 1, then click "Connect" . After connecting and uploading data from to the RIO-9830, the Utility will give detailed information regarding system settings, I/O configurations, etc.




**Step 3 :** Adjustment of module setting

After clicking "Upload" , the module plugged in RIO-9830 system will display in the rack list. Then click module in the rack list, the configuration of the module will display on the right side. Finally, click "Set" and "Download" button will apply the changes.

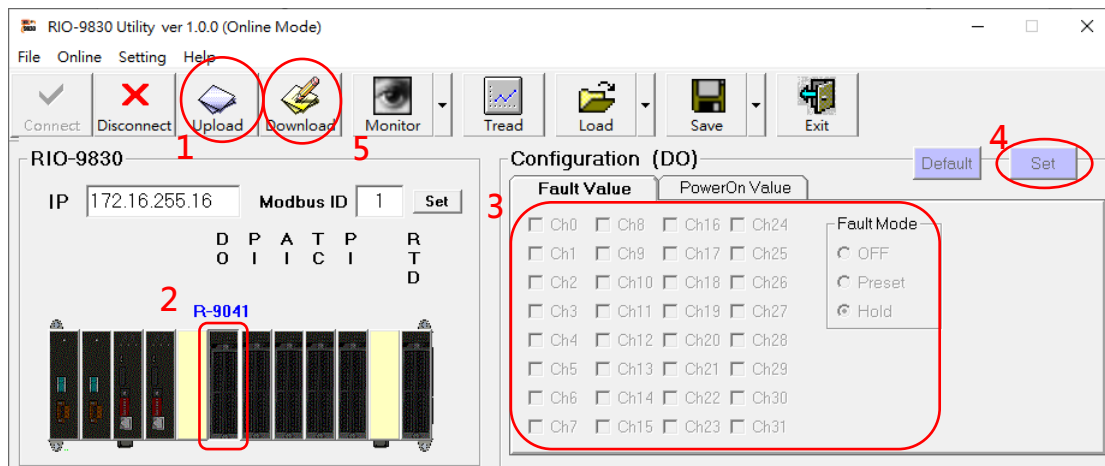

**Step 3 :** Save/Load all settings.

After clicking “Save” , the Utility will generate a file (default is RIO-9830\_MCU.ini). Users can use the “Load” method to load the file and review the settings of specific controller and every modules plug on it.

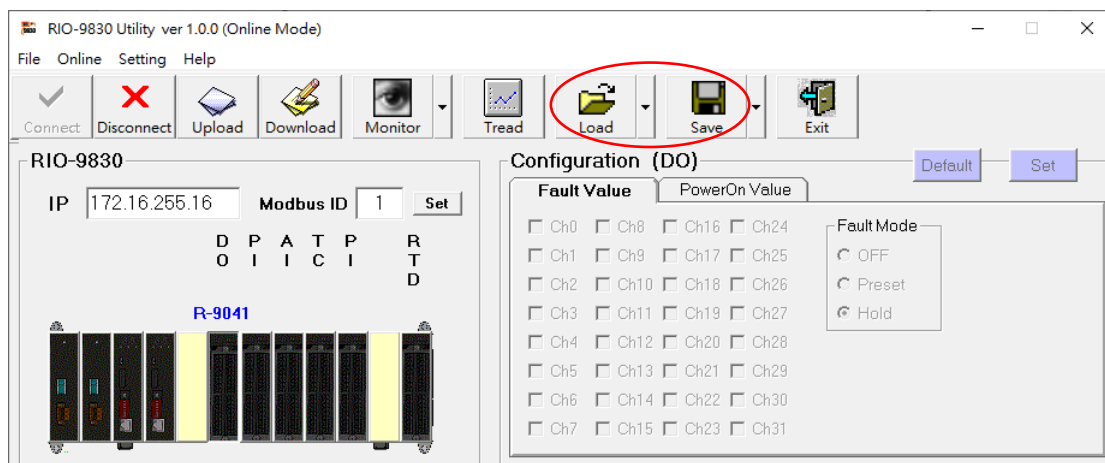

## 2.4 Parameter Configuration

This section will introduce how to configure the parameter of the module. Each module will have different parameter, like input type, power-on value...etc. These can be done by a specified command or the utility. The following section will describe the parameter for each module.

### 2.4.1 Parameter for Digital Input

After connecting and uploading data from RCM-MTCP, the configuration of the DI module will be read and displayed on the "Configuration" panel.




**NOTE:** For DI modules, it do not exist any parameter need to be set, therefore you will see a display with empty panel for DI modules.

## 2.4.2 Parameter for Digital Output

After connecting and uploading data from RCM-MTCP, the configuration of the DO module will be read and displayed on the "Configuration" panel.

- ✓ Configure the parameters for digital output

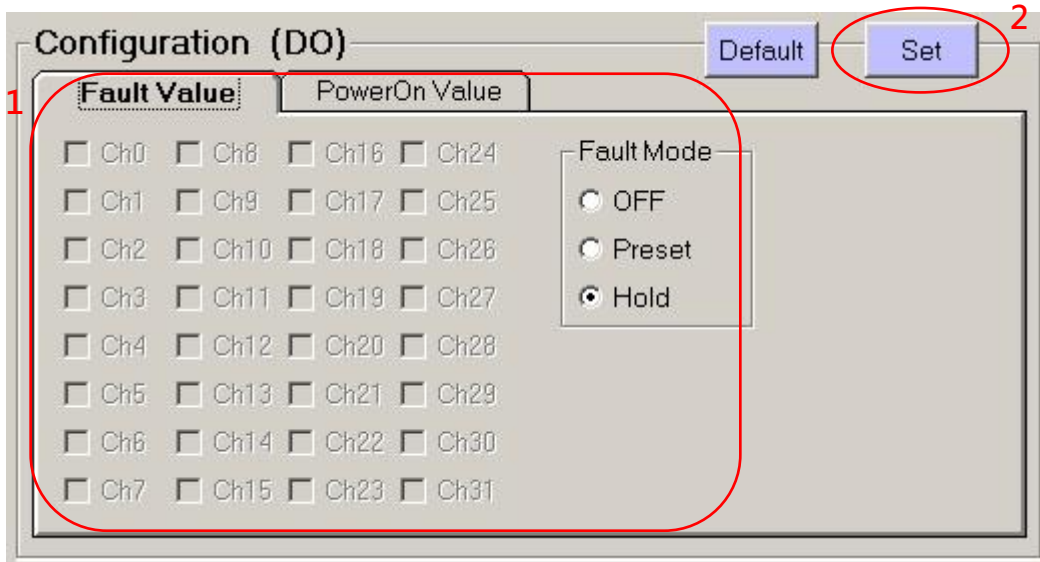

- ✓ Download the configuration into module



## 2.4.3 Parameter for Analog Input

After connecting and uploading data from RCM-MTCP, the configuration of the AI module will be read and displayed on the "Configuration" panel.

### 2.4.3.1 General Analog Input Module

- ✓ Configure the parameters for analog input

Configuration (AI) [Default] [Set]

Ch0~Ch7

	Input Range	Alarm Mode	Low Alarm	High Alarm
Ch0	+1.0V ~ +5.0 V	Disable	0.5	5.5
Ch1	+1.0V ~ +5.0 V	Disable	0.5	5.5
Ch2	+1.0V ~ +5.0 V	Disable	0.5	5.5
Ch3	+1.0V ~ +5.0 V	Disable	0.5	5.5
Ch4	+1.0V ~ +5.0 V	Disable	0.5	5.5
Ch5	+1.0V ~ +5.0 V	Disable	0.5	5.5
Ch6	+1.0V ~ +5.0 V	Disable	0.5	5.5
Ch7	+1.0V ~ +5.0 V	Disable	0.5	5.5

- ✓ Download the configuration into module



### 2.4.3.2 Thermocouple

- ✓ Configure the parameters for thermocouple


Configuration (TC) [Mode Conf] [Default] [Set]

Ch0~Ch7

	Input Range	Scale_Low	Scale_High	Alarm Mode	Low Alarm	High Alarm
Ch0	K-type (-270.0 ~ +1372.0)	-270.0	1372.0	Disable	-270.0	1372.0
Ch1	K-type (-270.0 ~ +1372.0)	-270.0	1372.0	Disable	-270.0	1372.0
Ch2	K-type (-270.0 ~ +1372.0)	-270.0	1372.0	Disable	-270.0	1372.0
Ch3	K-type (-270.0 ~ +1372.0)	-270.0	1372.0	Disable	-270.0	1372.0
Ch4	K-type (-270.0 ~ +1372.0)	-270.0	1372.0	Disable	-270.0	1372.0
Ch5	K-type (-270.0 ~ +1372.0)	-270.0	1372.0	Disable	-270.0	1372.0
Ch6	K-type (-270.0 ~ +1372.0)	-270.0	1372.0	Disable	-270.0	1372.0
Ch7	K-type (-270.0 ~ +1372.0)	-270.0	1372.0	Disable	-270.0	1372.0



- ✓ Configure another parameters for thermocouple

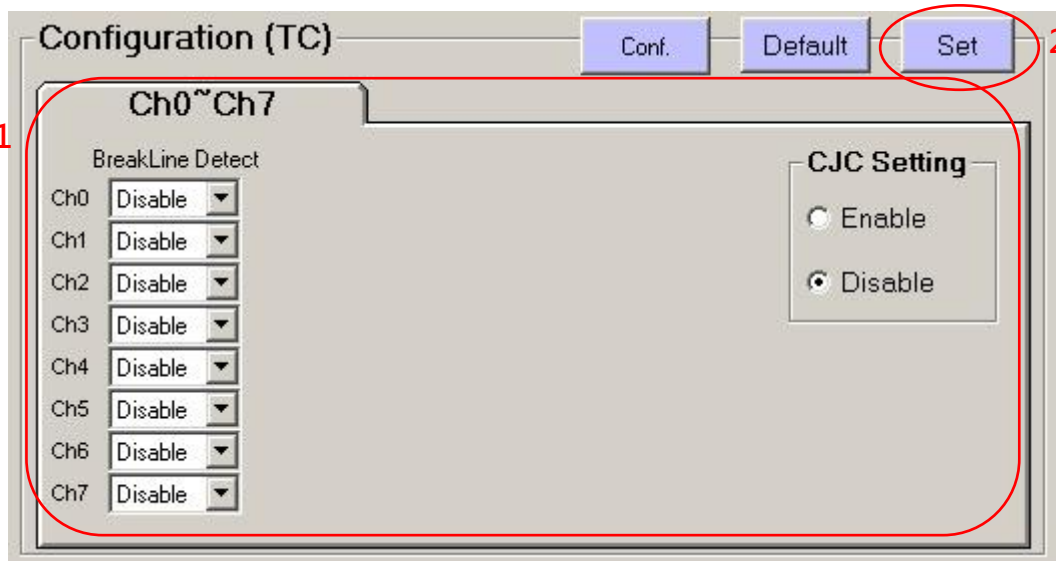


- ✓ Download the configuration into module




### 2.4.3.3 RTD

- ✓ Configure the parameters for thermocouple

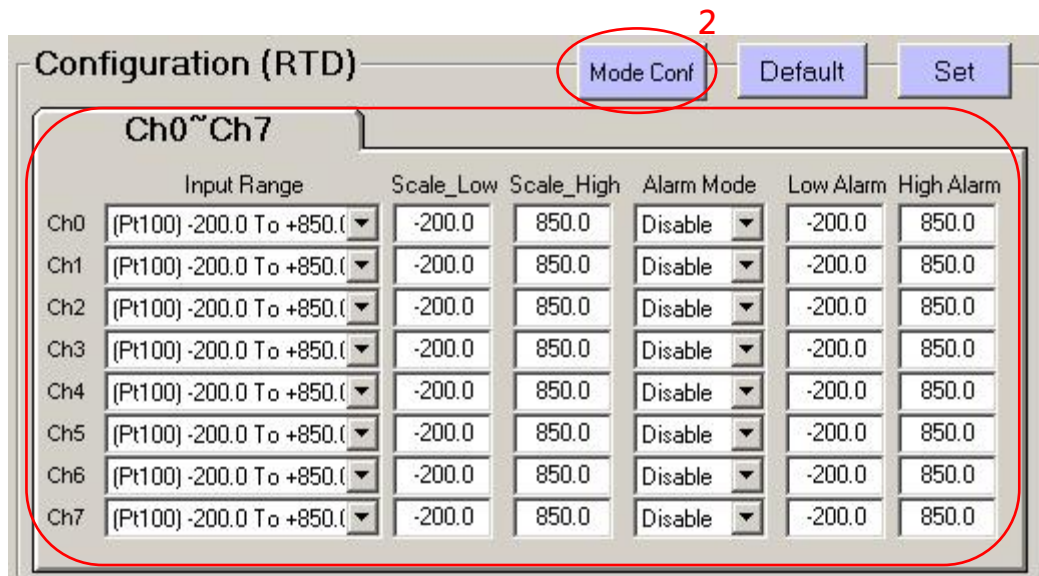

- ✓ Configure another parameters for thermocouple

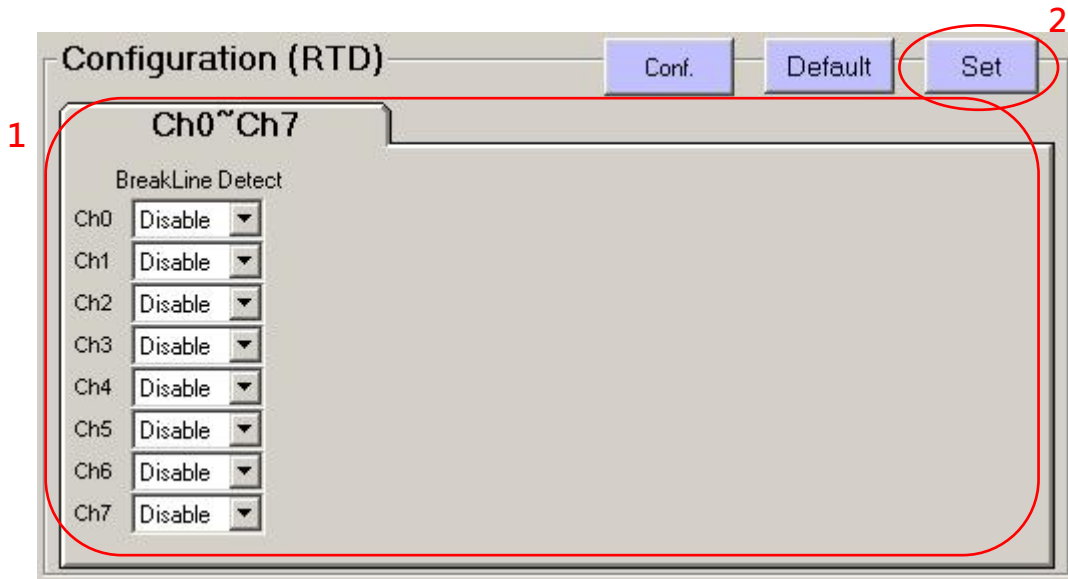


- ✓ Download the configuration into module



## 2.4.4 Parameter for Analog Output

After connecting and uploading data from RCM-MTCP, the configuration of the AO module will be read and displayed on the "Configuration" panel.

- ✓ Configure the parameters for thermocouple

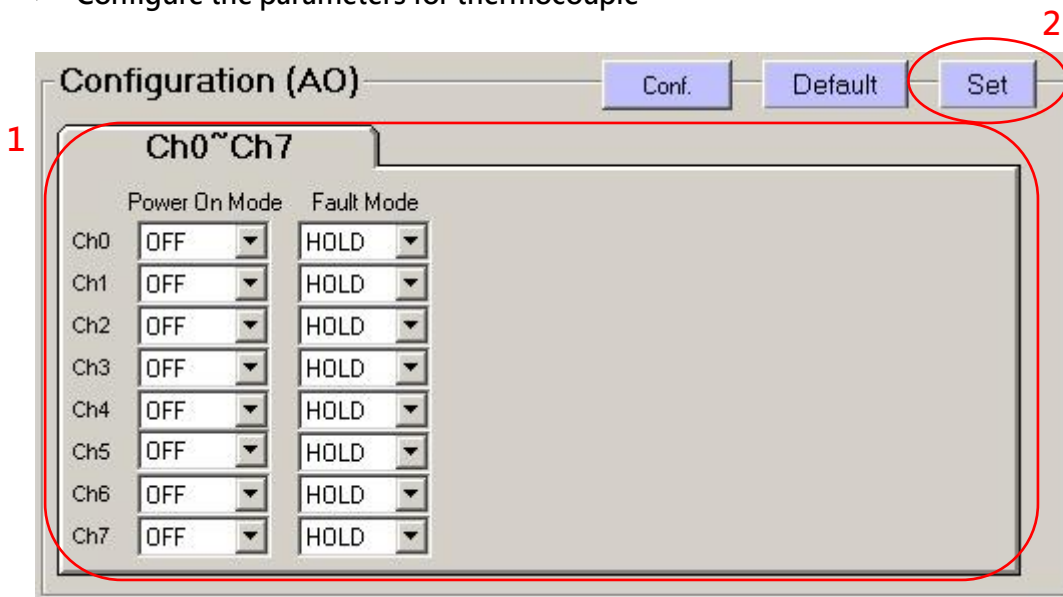


- ✓ Download the configuration into module



## 2.4.5 Parameter for Counter

After connecting and uploading data from RCM-MTCP, the configuration of the counter module will be read and displayed on the "Configuration" panel.

- ✓ Configure the parameters for thermocouple

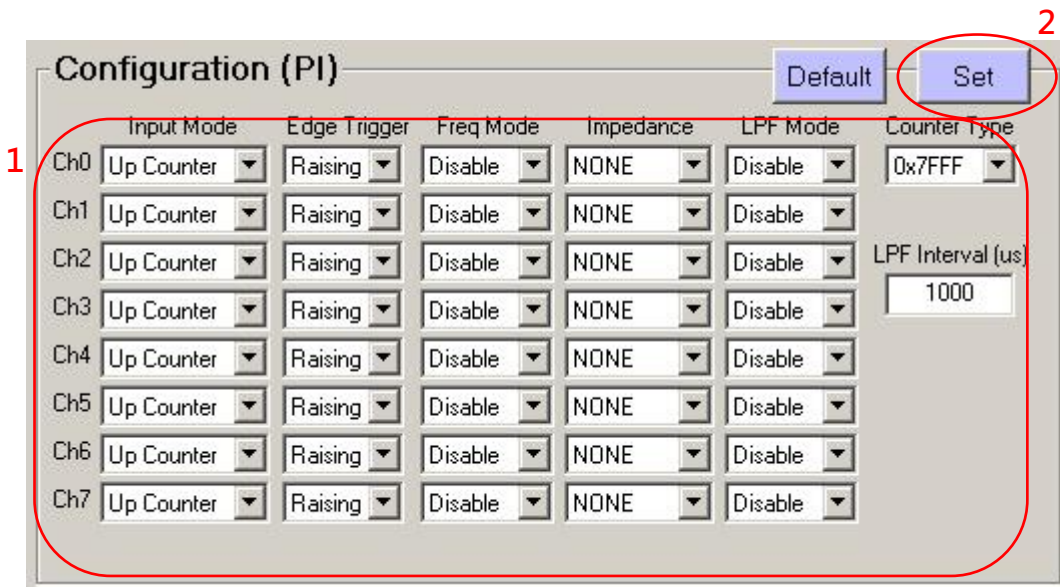


- ✓ Download the configuration into module




## 2.4.6 Common Parameters

There are some common parameters like redundancy and cable break-off detection that can be set. These parameters are listed in the MCU panel by clicking the RCM-MTCP module. After clicking RCM-MTCP modules, these parameters will be displayed on the right side of the Utility.

- ✓ Click the RCM-MTCP module

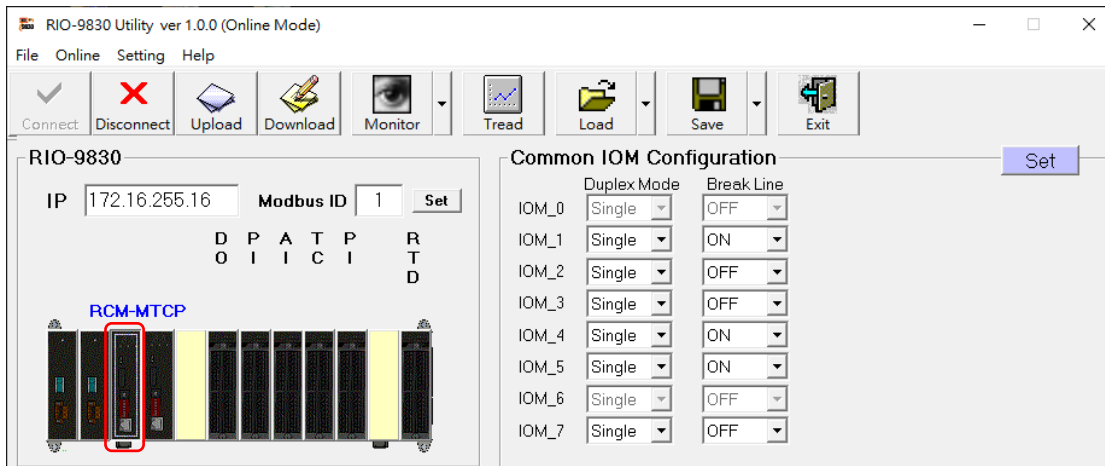

- ✓ Set the common configuration

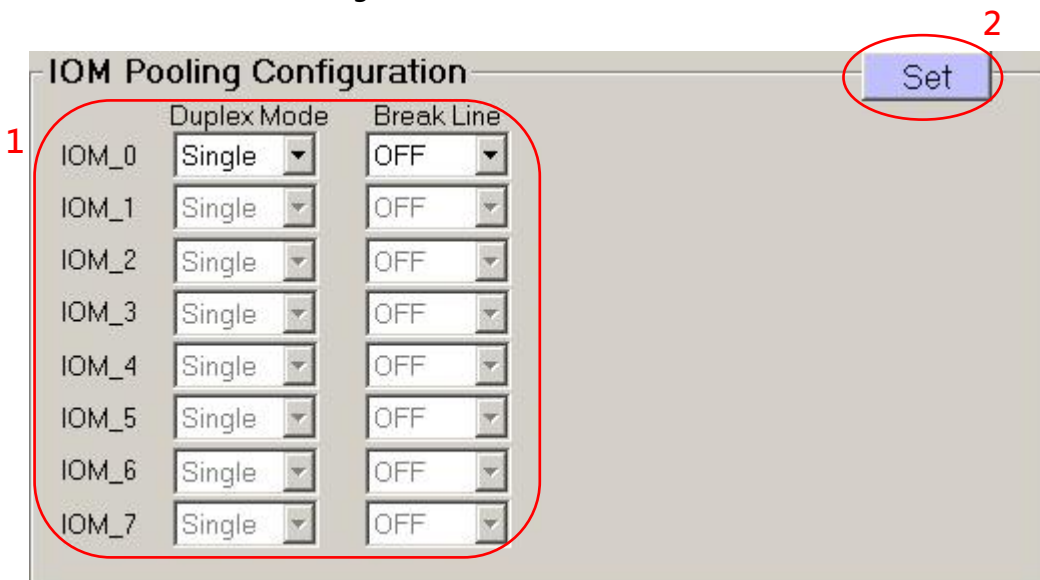


- ✓ Download the configuration into module



## 2.5 I/O Data Monitoring

The RIO-9830 utility provides a “Monitor” function for user to read/write I/O data via Modbus/TCP protocol. After connecting and uploading data from RIO-9830, users can follow the following steps to read/write IOM data.

- ✓ Enable the "Monitor" function

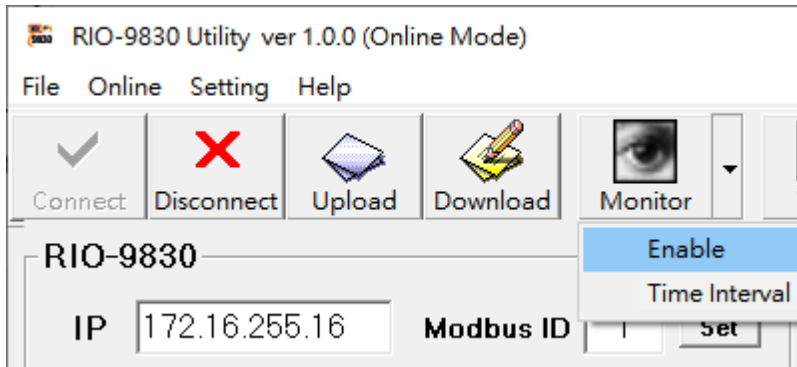

- ✓ Read I/O data (digital input, analog input and counter)

DI Mapping		DO Mapping	AI Mapping	AO Mapping	PI Mapping	PO Mapping	Summary
<b>Digital Input (1xxxx)</b>							
Address	Module	Slot	Channel	Value	Comment		
224 [0E0]	R-9040	7	0	OFF	[40]Digital Module		
225 [0E1]	R-9040	7	1	OFF	[40]Digital Module		
226 [0E2]	R-9040	7	2	OFF	[40]Digital Module		
227 [0E3]	R-9040	7	3	OFF	[40]Digital Module		
228 [0E4]	R-9040	7	4	OFF	[40]Digital Module		
229 [0E5]	R-9040	7	5	OFF	[40]Digital Module		
230 [0E6]	R-9040	7	6	OFF	[40]Digital Module		
231 [0E7]	R-9040	7	7	OFF	[40]Digital Module		

- ✓ Write I/O data (digital output, analog output and PWM)

DI Mapping		DO Mapping	AI Mapping	AO Mapping	PI Mapping	PO Mapping	Summary
<b>Digital Output (0xxxx)</b>							
Address	Module	Slot	Channel	Value	Comment		
032 [020]	R-9041	1	0	OFF	[40]Digital Module		
033 [021]	R-9041	1	1	OFF	[40]Digital Module		
034 [022]	R-9041	1	2	OFF	[40]Digital Module		
035 [023]	R-9041	1	3	OFF	[40]Digital Module		
036 [024]	R-9041	1	4	OFF	[40]Digital Module		
037 [025]	R-9041	1	5	OFF	[40]Digital Module		
038 [026]	R-9041	1	6	OFF	[40]Digital Module		
039 [027]	R-9041	1	7	OFF	[40]Digital Module		


- ✓ Status overview

DI Mapping		DO Mapping	AI Mapping	AO Mapping	PI Mapping	PO Mapping	Summary	
<b>IDM Summary</b>				<b>MCU Summary</b>				
Slot	Module Name	Fw version	NMT status	Sing	Module Name	Fw version	FwLib version	MCU status
00	R-9084	v1.0	OPERATION		RCM-MTCP	v1.11	v0.00	Master MCU
01	R-9041	v1.0	OPERATION					
02	R-9028CH	v1.0	OPERATION					
03	R-9017C1H	v2.0	OPERATION					
04	R-9015	v1.1	OPERATION					
05	R-9017V1	v2.0	OPERATION					
06								


## 2.6 Saving/Loading Parameter

The RIO-9830 utility tool offers “Saving” and “Loading” parameters to/from RCM-MTCP. These two functionalities can help users to read parameters at off-line mode and to write some parameters into another RCM-MTCP.

### ✓ Load parameters from .ini file

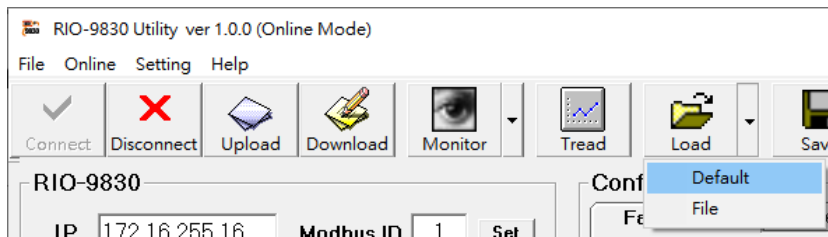


### ✓ Save parameters into .ini file

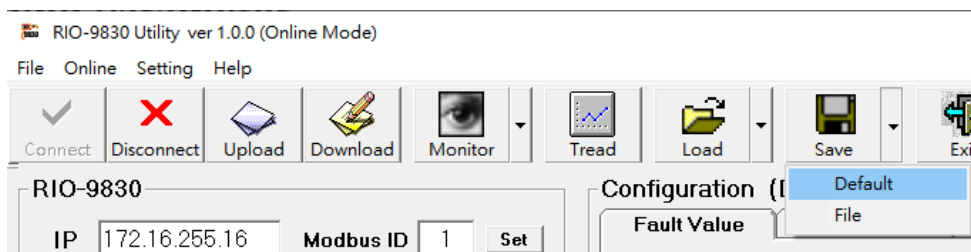


## 2.7 Event Log

The RIO-9830 utility also supports event log to record all the process that utility has done.

### ✓ Display the event log frame

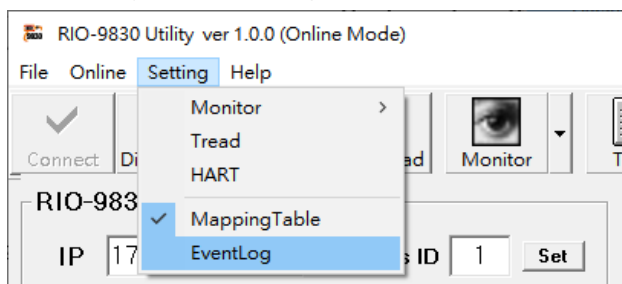

### ✓ Save data log into file

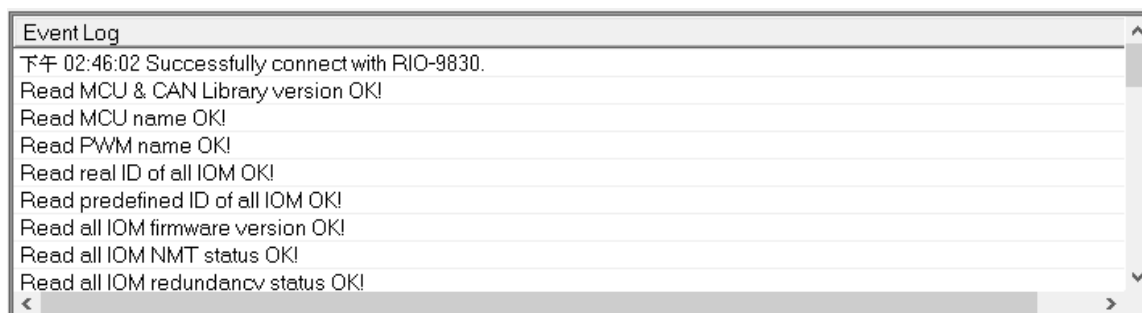

## 2.8 System Summary

The RIO-9830 utility provides a "Summary" tab for users to read the real-time status of the RCM-MTCP and IOM modules through the Modbus/TCP protocol. Users can monitor the health status of the module through the following recommended Modbus/TCP address. However, if users have additional requirements, add other Modbus/TCP addresses ([4.2 System Information](#)).

The screenshot shows the 'Summary' tab of the RIO-9830 utility. It contains two summary tables: 'IOM Summary' and 'MCU Summary'.

Slot	Module Name	FW version	NMT status	Sing
00	R-9084	v1.0	OPERATION	
01	R-9041	v1.0	OPERATION	
02	R-9028CH	v1.0	OPERATION	
03	R-9017C1H	v2.0	OPERATION	
04	R-9015	v1.1	OPERATION	
05	R-9017V1	v2.0	OPERATION	
06				

Module Name	FW version	FWLib version	MCU status
RCM-MTCP	v1.11	v0.00	Master MCU

### ✓ MCU Summary (RCM-MTCP) suggested items

Start Address (Decimal)	No. of Points	Description	Remark
00514	1	Neighbor FCM slot status	0x0000: Empty 0x0001: Timeout 0x0002: Undefined 0x0010: Normal
00516	1	FPM status	0x0000: No FPM plugged 0x0001: FPM1 GOOD / FPM2 OFF 0x0002: FPM1 OFF / FPM2 GOOD 0x0003: 2 FPMs are GOOD
00517	2	System minor fault status	Refer to Table 4.2
00519	2	System major fault status	Refer to Table 4.3

### ✓ IOM Summary (Module) suggested items

Start Address (Decimal)	No. of Points	Description	Remark
00593	8	I/O slot status	Refer to 4.2.2 System information
00609	8	Emergency	Refer to 4.2.2 System information

## Section 3 Modbus Command

RCM-MTCP is a communication module with Modbus/TCP slave protocol. The following table is the supported function code. Other function codes are not implemented. The query and response packet for each of these commands is then described in the following section.

Function Code	Modbus Command
0x01	Read coil status
0x02	Read input status
0x03	Read holding registers
0x04	Read input registers
0x05	Write single coil
0x06	Write single register
0x0F	Force multiple coils
0x10	Preset multiple registers

Each byte of the query and response packet of the Modbus command are described with the excepted of the field shown opposite. These are always present in the queries and responses of all Modbus commands.

Slave Address	Function Code	.....
------------------	------------------	-------

**Slave Address:** This is sent from master and can not be changed (Valid Modbus device address: 1 to 247)

**Function Code:** This is sent from master and can not be changed (Function code of the Modbus command)

It is a better idea to have a standard Modbus document, such as the guide entitled Modicon Modbus Protocol Reference Guide, therefore you can see the correspondence between the elements displayed in Utility and the content of the corresponding Modbus frames.

The following sections are some introduction of Modbus function codes.



### 3.1 "Read Coil Status" (0x01)

Read the binary status of discrete output in the slave. The query message specifies the starting coil and the quantity of coils to be read. And the coil status in the response message is packed as one coil per bit of the data field.

- ✓ **Query (Each field represents a byte)**

Slave Address	Function Code	Start Address Hi	Start Address Lo	No. of Point Hi	No. of Point Lo
---------------	---------------	------------------	------------------	-----------------	-----------------

Here is an example of a request to read coils 20~56 from slave device 17:

Slave Address	Function Code	Start Address Hi	Start Address Lo	No. of Point Hi	No. of Point Lo
0x11	0x01	0x00	0x13	0x00	0x25

- ✓ **Response (Each field represents a byte)**

Slave Address	Function Code	Byte Count	Coil Data
---------------	---------------	------------	-----------

Here is an example of a response to the query on the opposite:

Slave Address	Function Code	Byte Count	Coil Data (27~20)	Coil Data (56~52)
0x11	0x01	0x05	0x13	0x1B

### 3.2 "Read Input Status" (0x02)

Read the binary status of discrete input in the slave. The query message specifies the starting input and quantity of inputs to be read. And the input status in the response message is packed as one input per bit of the data field.

- ✓ **Query (Each field represents a byte)**

Slave Address	Function Code	Start Address Hi	Start Address Lo	No. of Point Hi	No. of Point Lo
---------------	---------------	------------------	------------------	-----------------	-----------------

Here is an example of a request to read inputs 197~218 from slave device 16:

Slave Address	Function Code	Start Address Hi	Start Address Lo	No. of Point Hi	No. of Point Lo
0x10	0x02	0x00	0xC4	0x00	0x16

✓ **Response (Each field represents a byte)**

Slave Address	Function Code	Byte Count	Input Data
---------------	---------------	------------	------------

Here is an example of a response to the query on the opposite:

Slave Address	Function Code	Byte Count	Input Data (204~197)	Input Data (218~213)
0x10	0x02	0x03	0xAD	0x25

### 3.3 "Read Holding Registers" (0x03)

Read the binary content of holding registers in the slave. The query message specifies the starting register and quantity of registers to be read. And the register data in the response message are packed as two bytes per register, with the binary contents right justified within each byte.

✓ **Query (Each field represents a byte)**

Slave Address	Function Code	Start Address Hi	Start Address Lo	No. of Point Hi	No. of Point Lo
---------------	---------------	------------------	------------------	-----------------	-----------------

Here is an example of a request to read register 108~110 from slave device 15:

Slave Address	Function Code	Start Address Hi	Start Address Lo	No. of Point Hi	No. of Point Lo
0x0F	0x03	0x00	0x6B	0x00	0x03

✓ **Response (Each field represents a byte)**

Slave Address	Function Code	Byte Count	Holding Register Data
---------------	---------------	------------	-----------------------

Here is an example of a response to the query on the opposite:

Slave Address	Function Code	Byte Count	Reg. Data Hi (Reg. 108)	Reg. Data Lo (Reg. 108)
0x0F	0x03	0x06	0x30	0xF1

### 3.4 "Read Input Registers" (0x04)

Read the binary content of input registers in the slave. The query message specifies the starting register and quantity of registers to be read. And the register data in the response message are packed as two bytes per register, with the binary contents right justified within each byte.

## ✓ Query (Each field represents a byte)

Slave Address	Function Code	Start Address Hi	Start Address Lo	No. of Point Hi	No. of Point Lo
---------------	---------------	------------------	------------------	-----------------	-----------------

Here is an example of a request to read register 9 & 10 from slave device 11:

Slave Address	Function Code	Start Address Hi	Start Address Lo	No. of Point Hi	No. of Point Lo
0x0B	0x04	0x00	0x08	0x00	0x02

## ✓ Response (Each field represents a byte)

Slave Address	Function Code	Byte Count	Input Register Data
---------------	---------------	------------	---------------------

Here is an example of a response to the query on the opposite:

Slave Address	Function Code	Byte Count	Reg. Data Hi (Reg. 9)	Reg. Data Lo (Reg. 9)
0x0B	0x04	0x04	0x01	0xA0

### 3.5 "Force Single Coil" (0x05)

Force a single coil to either ON or OFF. The query message specifies the coil reference to be forced. The requested ON/OFF state is specified by a constant in the query data field. A value of FF 00 hex requests the coil to be ON. A value of 00 00 requests it to be OFF. All other values are illegal and will not affect the coil.

## ✓ Query (Each field represents a byte)

Slave Address	Function Code	Coil Address Hi	Coil Address Lo	Force Data Hi	Force Data Lo
---------------	---------------	-----------------	-----------------	---------------	---------------

Here is an example of a request to force coil 173 ON in slave device 5:

Slave Address	Function Code	Coil Address Hi	Coil Address Lo	Force Data Hi	Force Data Lo
0x05	0x05	0x00	0xAC	0xFF	0x00

✓ **Response (Each field represents a byte)**

Slave Address	Function Code	Coil Address Hi	Coil Address Lo	Force Data Hi	Force Data Lo
---------------	---------------	-----------------	-----------------	---------------	---------------

Here is an example of a response to the query on the opposite:

Slave Address	Function Code	Coil Address Hi	Coil Address Lo	Force Data Hi	Force Data Lo
0x05	0x05	0x00	0xAC	0xFF	0x00

### 3.6 “Force Multiple Coils” (0x0F)

Forces each coil in a sequence of coils to either ON or OFF. The query message specifies the coil references to be forced. The requested ON/OFF states are specified by contents of the query data field. A logical 1 in a bit position of the field requests the corresponding coil to be ON. A logical 0 requests it to be OFF.

The normal response returns the slave address, function code, starting address, and quantity of registers preset.

✓ **Query (Each field represents a byte)**

Slave Address	Function Code	Coil Addr. Hi	Coil Addr. Lo	Quantity of Coil Hi	Quantity of Coil Lo	Byte Count	Force Data
---------------	---------------	---------------	---------------	---------------------	---------------------	------------	------------

Here is an example of a request to force coils 20~29 in slave device 9:

Slave Address	Function Code	Coil Addr. Hi	Coil Addr. Lo	Quantity of Coil Hi	Quantity of Coil Lo	Byte Count	Force Data
0x09	0x0F	0x00	0x13	0x00	0x0A	0x02	0xCD

✓ **Response (Each field represents a byte)**

Slave Address	Function Code	Coil Addr. Hi	Coil Addr. Lo	Quantity of Coil Hi	Quantity of Coil Lo
---------------	---------------	---------------	---------------	---------------------	---------------------

Here is an example of a response to the query on the opposite:

Slave Address	Function Code	Coil Addr. Hi	Coil Addr. Lo	Quantity of Coil Hi	Quantity of Coil Lo
0x09	0x0F	0x00	0x13	0x00	0x0A

### 3.7 "Preset Multiple Registers" (0x10)

Preset values into sequence of holding registers. The query message specifies the register reference to be preset. The normal response returns the slave address, function code, starting address, and quantity of register preset.

✓ **Query (Each field represents a byte)**

Slave Address	Function Code	Start Addr. Hi	Start Addr. Lo	No. of Reg. Hi	No. of Reg. Lo	Byte Count	Reg. Data

Here is an example of a request to preset registers 2 & 3 to 0x123A and 0x0245B in slave device 9:

Slave Address	Function Code	Start Addr. Hi	Start Addr. Lo	No. of Reg. Hi	No. of Reg. Lo	Byte Count	Reg. Data
0x09	0x10	0x00	0x01	0x00	0x02	0x04	0x12

✓ **Response (Each field represents a byte)**

Slave Address	Function Code	Start Addr. Hi	Start Addr. Lo	No. of Reg. Hi	No. of Reg. Lo

Here is an example of a response to the query on the opposite:

Slave Address	Function Code	Start Addr. Hi	Start Addr. Lo	No. of Reg. Hi	No. of Reg. Lo
0x09	0x10	0x00	0x01	0x00	0x02

### 3.8 Exception Responses

When a slave receives the query without a communication error, but cannot handle it, the slave will return an exception response informing the master of the nature of the error. The structure of an exception response is independent of the Modbus command associated with the "Function" field of the query involved. The whole frame of an exception response is shown below, depended on Modbus devices.

The exception response message has two fields that differentiate it from a normal response:

**Function Code Field:** In a normal response, the slave echoes the function code of the original query in the function code field of the response. All function codes have a most-significant bit (MSB) of 0 (their values are all below 80 hexadecimal). In an exception response, the slave sets the MSB of the function code to 1. This makes the function code value in an exception response exactly 80 hexadecimal higher than the value would be for a normal response. With the function code's MSB set, the master's application program can recognize the exception response

and can examine the data field for the exception code.

**Data Field:** In a normal response, the slave may return data or statistics in the data field (any information that was requested in the query). In an exception response, the slave returns an exception code in the data field. This defines the slave condition that caused the exception.

Here is an example of a master query and slave exception response with exception code 0x02.

✓ **Query (Each field represents a byte)**

Slave Address	Function Code	Start Address Hi	Start Address Lo	No. of Point Hi	No. of Point Lo
0x0A	0x01	0x04	0xA1	0x00	0x01

✓ **Response (Each field represents a byte)**

Slave Address	Function Code	Exception Code
0x0A	0x81	0x02

The following table is the exception code of the RCM-MTCP. Each code represents different meaning.

Code	Name	Meaning
0x01	Illegal Function	The function code received in the query is not an allowable action for the slave.
0x02	Illegal Data Address	The data address received in the query is not an allowable address for the slave.
0x03	Illegal Data Value	A value contained in the query data field is not an allowable value for the slave.
0x04	Slave Device Failure	An unrecoverable error occurred while the slave was attempting to perform the requested action.

## Section 4 Modbus Addresses Mapping

### 4.1 Channel Value

Table 4.1-1

Module Name	Type Range	Data Range
R-9017C1H	4 ~ 20 mA	0 ~ 10000
R-9017C2H	4 ~ 20 mA	0 ~ 10000
R-9015	Pt100, -200 ~ 850°C (Default)	0 ~ 10000
	JPt100, -200 ~ 630 °C	
	Pt1000, -200 ~ 630 °C	
R-9019	K-type, -270 ~ 1372 °C (Default)	0 ~ 10000
	T-type, -270 ~ 400 °C	
	E-type, -270 ~ 1000 °C	
	N-type, -270 ~ 1300 °C	
	J-type, -210 ~ 1200 °C	
	R-type, -50 ~ 1765 °C	
	S-type, -50 ~ 1765 °C	
	B-type, 0 ~ 1820 °C	
	C-type, 0 ~ 2320 °C	
R-9028CH	4 ~ 20 mA	0 ~ 10000

### 4.1.1 Digital Input (Supported FC: 0x02)

The channel value of digital input modules in the RCM-MTCP can be read by function code 0x02, and the address mapping are listed below.

Start Address (Decimal)	No. of Points	Address Range	Description
00001	32	00001~00032	Slot 0, channel 0 ~ 31 value
00033	32	00033~00064	Slot 1, channel 0 ~ 31 value
00065	32	00065~00096	Slot 2, channel 0 ~ 31 value
00097	32	00097~00128	Slot 3, channel 0 ~ 31 value
00129	32	00129~00160	Slot 4, channel 0 ~ 31 value
00161	32	00161~00192	Slot 5, channel 0 ~ 31 value
00193	32	00193~00224	Slot 6, channel 0 ~ 31 value
00225	32	00225~00256	Slot 7, channel 0 ~ 31 value

### 4.1.2 Digital Output (Supported FC: 0x01, 0x05, 0x0F)

The channel value of digital output modules in the RCM-MTCP can be read or written by function code 0x01, 0x05 and 0x0F, and the address mapping are listed below.

Start Address (Decimal)	No. of Points	Address Range	Description
00001	32	00001~00032	Slot 0, channel 0 ~ 31 value
00033	32	00033~00064	Slot 1, channel 0 ~ 31 value
00065	32	00065~00096	Slot 2, channel 0 ~ 31 value
00097	32	00097~00128	Slot 3, channel 0 ~ 31 value
00129	32	00129~00160	Slot 4, channel 0 ~ 31 value
00161	32	00161~00192	Slot 5, channel 0 ~ 31 value
00193	32	00193~00224	Slot 6, channel 0 ~ 31 value
00225	32	00225~00256	Slot 7, channel 0 ~ 31 value



### 4.1.3 Analog Input (Supported FC: 0x04)

The channel value of analog input modules in the RCM-MTCP can be read by function code 0x04, and the address mapping are listed below.

Start Address (Decimal)	No. of Points	Address Range	Description
00001	16	00001~00016	Slot 0, channel 0 ~ 15 value
00017	16	00017~00032	Slot 1, channel 0 ~ 15 value
00033	16	00033~00048	Slot 2, channel 0 ~ 15 value
00049	16	00049~00064	Slot 3, channel 0 ~ 15 value
00065	16	00065~00080	Slot 4, channel 0 ~ 15 value
00081	16	00081~00096	Slot 5, channel 0 ~ 15 value
00097	16	00097~00112	Slot 6, channel 0 ~ 15 value
00113	16	00113~00128	Slot 7, channel 0 ~ 15 value

### 4.1.4 Analog Output (Supported FC: 0x03, 0x06, 0x10)

The channel value of analog output modules in the RCM-MTCP can be read or written by function code 0x03, 0x06 and 0x10, and the address mapping are listed below.

Start Address (Decimal)	No. of Points	Address Range	Description
00001	16	00001~00016	Slot 0, channel 0 ~ 15 value
00017	16	00017~00032	Slot 1, channel 0 ~ 15 value
00033	16	00033~00048	Slot 2, channel 0 ~ 15 value
00049	16	00049~00064	Slot 3, channel 0 ~ 15 value
00065	16	00065~00080	Slot 4, channel 0 ~ 15 value
00081	16	00081~00096	Slot 5, channel 0 ~ 15 value
00097	16	00097~00112	Slot 6, channel 0 ~ 15 value
00113	16	00113~00128	Slot 7, channel 0 ~ 15 value

### 4.1.5 Counter (Supported FC: 0x04)

The channel value of counter modules in the RCM-MTCP can be read by function code 0x04, and the address mapping are listed below.

Start Address (Decimal)	No. of Points	Address Range	Description
00129	32	00129~00160	Slot 0, channel 0 ~ 15 value (Each channel takes 2 register)
00161	32	00161~00192	Slot 1, channel 0 ~ 15 value (Each channel takes 2 register)
00193	32	00193~00224	Slot 2, channel 0 ~ 15 value (Each channel takes 2 register)
00225	32	00225~00256	Slot 3, channel 0 ~ 15 value (Each channel takes 2 register)
00257	32	00257~00288	Slot 4, channel 0 ~ 15 value (Each channel takes 2 register)
00289	32	00289~00320	Slot 5, channel 0 ~ 15 value (Each channel takes 2 register)
00321	32	00321~00352	Slot 6, channel 0 ~ 15 value (Each channel takes 2 register)
00353	32	00353~00384	Slot 7, channel 0 ~ 15 value (Each channel takes 2 register)

### 4.1.6 PWM (Supported FC: 0x03, 0x06, 0x10)

The channel value of PWM modules in the RCM-MTCP can be read or written by function code 0x03, 0x06 and 0x10, and the address mapping are listed below.

Start Address (Decimal)	No. of Points	Address Range	Description
00257	32	00257~00288	Slot 0, channel 0 ~ 15 value (Each channel takes 1 register)
00289	32	00289~00320	Slot 1, channel 0 ~ 15 value (Each channel takes 1 register)
00321	32	00321~00352	Slot 2, channel 0 ~ 15 value (Each channel takes 1 register)
00353	32	00353~00384	Slot 3, channel 0 ~ 15 value (Each channel takes 1 register)
00385	32	00385~00416	Slot 4, channel 0 ~ 15 value (Each channel takes 1 register)
00417	32	00417~00448	Slot 5, channel 0 ~ 15 value (Each channel takes 1 register)
00449	32	00449~00480	Slot 6, channel 0 ~ 15 value (Each channel takes 1 register)
00481	32	00481~00512	Slot 7, channel 0 ~ 15 value (Each channel takes 1 register)

## 4.1.7 HART

Users can send the HART command via Modbus TCP protocol by HART modules to field devices. The following sections describe how to send and receive HART by using Modbus TCP protocol.

### 4.1.7.1 HART Send (Supported FC: 0x10)

The following table shows how to send the HART.

Byte Index	Description	Length (Byte)	Remark												
0	Slave Address	1	0x01												
1	Function Code	1	0x10												
2~3	Start Address	2	0x02 0x00												
4~5	Number of Point	2	Round up the value of (HART Data length + 10) / 2												
6	Byte Count	1	HART Data length + 10												
7~8	Header	2	0x40 0x00												
9	Slot	1	Slot: 0x00~0x07												
10	Channel	1	Channel: 0x00~0x10												
11~12	HART Data Count	2	Total byte of the HART sending command												
13~16	Reserved	4	Reserved												
17~N	HART Data	N	<p>The HART sending data. The byte stream will be re-constructed in word format.</p> <p>For example, sending 0xFF 0xFF 0xFF 0xFF 0xFF 0x02 0x80 0x00 0x00 0x82, the byte stream will construct to Modbus register like the following table.</p> <table border="1"> <thead> <tr> <th>Register</th> <th>Value</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0xFFFF</td> </tr> <tr> <td>1</td> <td>0xFFFF</td> </tr> <tr> <td>2</td> <td>0x02FF</td> </tr> <tr> <td>3</td> <td>0x0080</td> </tr> <tr> <td>4</td> <td>0x8200</td> </tr> </tbody> </table>	Register	Value	0	0xFFFF	1	0xFFFF	2	0x02FF	3	0x0080	4	0x8200
Register	Value														
0	0xFFFF														
1	0xFFFF														
2	0x02FF														
3	0x0080														
4	0x8200														

#### 4.1.7.2 HART Receive (Supported FC: 0x04)

After sending HART command, users have to poll the following table to see the HART response data and the status.

Where M = 256 x Slot ID

Start Address (Decimal)	No. of Points	Description	Remark
M+5121	1	HART process status	Status of HART transaction process
M+5122	1	HART process error code	Error code of HART transaction process
M+5123	1	HART response data length	Response length of HART transaction
M+5124	253	HART response data	Response data of HART transaction

## 4.2 System Information

The information of RIO-9830 system is mapped into Modbus addresses. The information, like statuses of RCM-MTCP, bus, power...etc, can be read by function code 0x03 and listed below.

### 4.2.1 Statuses

Start Address (Decimal)	No. of Points	Description	Remark
00513	1	RCM-MTCP redundant mode	0x0020: Master 0x0021: Slave
00514	1	Neighbor FCM slot status	0x0000: Empty 0x0001: Timeout 0x0002: Undefined 0x0010: Normal
00515	1	System bus status	Refer to Table 4.1
00516	1	FPM status	0x0000: No FPM plugged 0x0001: FPM1 GOOD / FPM2 OFF 0x0002: FPM1 OFF / FPM2 GOOD 0x0003: 2 FPMs are GOOD
00517	2	System minor fault status	Refer to Table 4.2
00519	2	System major fault status	Refer to Table 4.3
00521	1	RCM-MTCP ID	
00522	1	RCM-MTCP DipSwitch	
00523	1		
00524	1		
00525	1		
00526	1		
00527	1	IP0	IP0 . IP1 . IP2 . IP3
00528	1	IP1	
00529	1	IP2	
00530	1	IP3	
00531	1	MAC0	MAC0 . MAC1 . MAC2 . MAC3 . MAC4 . MAC5
00532	1	MAC1	
00533	1	MAC2	
00534	1	MAC3	
00535	1	MAC4	
00536	1	MAC5	
00545	1	System current time (Year)	

00546	1	System current time (Month)	
00547	1	System current time (Day)	
00548	1	System current time (Hour)	
00549	1	System current time (Minute)	
00550	1	System current time (Second)	
00553	1	RTC battery voltage	Ex: 0x0119 means 2.81 (V)

Table 4.1 System bus status

Bit	Description	Remark
7	Bus operating status	1: Bus-off, 0: Normal
6	Bus error indication	1: Bus error, 0: Normal
5	Tx status	1: Transmitting, 0: Idle
4	Rx status	1: Receiving, 0: Idle
3	Tx complete status	1: Complete, 0: Incomplete
2	Tx buffer status	1: Released, 0: Lock
1	Data overrun status	1: Data overrun, 0: Absent
0	Rx buffer status	1: Full, 0: Empty

Table 4.2 System minor fault status

Bit	Description	Remark
31		
30		
29		
28		
27		
26		
25		
24		
23		
22		
21		
20		
19		
18		
17		
16		
15		
14		
13		
12	Ethernet Link error	1: Fault, 0: None
11		
10		
9		
8	Dip switches setting error when running	1: Fault, 0: None
7		
6		
5		
4	RTC timeout	1: Fault, 0: None
3	Micro SD timeout	1: Fault, 0: None
2	Micro SD R/W block	1: Fault, 0: None
1	Micro SD detect	1: Fault, 0: None
0	Micro SD initialization	1: Fault, 0: None



Table 4.3 System major fault status

Bit	Description	Remark
31		
30		
29		
28		
27		
26		
25	System bus data overrun	1: Fault, 0: None
24	System bus off	1: Fault, 0: None
23		
22		
21		
20	Allocate MCU memory error when initial	1: Fault, 0: None
19		
18		
17		
16	MAC address error when initial	1: Fault, 0: None
15		
14		
13		
12		
11		
10		
9		
8	Dip-switch setting error when initial	1: Fault, 0: None
7		
6	Initial Modbus fail when initial	1: Fault, 0: None
5	Initial MCU fail when initial	1: Fault, 0: None
4	Initial CAN HW error when initial	1: Fault, 0: None
3		
2		
1		
0	MCU reset by WDT error	1: Fault, 0: None

## 4.2.2 System information

The system information is about the I/O information from slot 0 to 7. It includes Module ID, type, operating status, emergency, under/exceed limit and redundant mode.

Start Address (Decimal)	No. of Points	Description	Remark	
			Value	Module
00577	8	Module ID	0x0001	R-9040
			0x0010	R-9041
			0x0061	R-9017V2
			0x0062	R-9017V1
			0x0031	R-9019
			0x0020	R-9015
			0x0049	R-9017C2H
			0x004A	R-9017C1H
			0x0071	R-9028V2
			0x0084	R-9028CH
			0x0072	R-9028V1
			0x0052	R-9026C1H
			0x0051	R-9028C2H
			0x00A0	R-9084
00585	8	Module type	0x0001	DI module
			0x0002	DO module
			0x0004	AI module
			0x0008	AO module
			0x0010	Counter module
			0x0020	PWM module
			00593	8
0x0002	Halt			
0x0004	Bootup			
0x0008	Bootloader			
0x0010	Pre-operation			
0x0020	Operation			
0x0040	Stop			
00601	8	Operation mode	0x0000	Init

			0x0001	Single
			0x0002	Redundant & Slave
			0x0005	Redundant & Master
			<b>Value</b>	<b>Mode</b>
00609	8	Emergency	0x0001	Cable break-off
			0x0002	CJC error
			0x0004	Channel break-off
00617	8	Under limit	Each bit represents 1 channel under limit flag 1: Channel value under limit 0: Normal	
00625	8	Under 2 <sup>nd</sup> limit	Each bit represents 1 channel under 2 <sup>nd</sup> limit flag 1: Channel value under 2 <sup>nd</sup> limit 0: Normal	
00633	8	Exceed limit	Each bit represents 1 channel exceed limit flag 1: Channel value exceed limit 0: Normal	
00641	8	Exceed 2 <sup>nd</sup> limit	Each bit represents 1 channel exceed 2 <sup>nd</sup> limit flag 1: Channel value exceed 2 <sup>nd</sup> limit 0: Normal	
00649	16	Channel break status	Each bit represents 1 channel break status, and each slot takes 2 register 1: Channel broken 0: Normal	
00665	16	Light Emergency	Refer to Table 4.4	
00681	16	Heavy Emergency	Refer to Table 4.5	

Table 4.4 Light Emergency

Bit	Description	Remark
31		
30		
29	DotIsolation DAC/ADC Fail	1: Fault, 0: None
28	Channel feedback comparison Fail	1: Fault, 0: None
27	Channel beak-off	1: Fault, 0: None
26	Hi/HiHi Alarm	1: Fault, 0: None
25	Lo/LoLo Alarm	1: Fault, 0: None
24	LED control Fail	1: Fault, 0: None
23	AO feedback Fail	1: Fault, 0: None
22	Secondary side lower PCB PWR Fail	1: Fault, 0: None
21	Secondary side upper PCB PWR Fail	1: Fault, 0: None
20	Primary side 3.3V Fail	1: Fault, 0: None
19	CAN2 5V fail	1: Fault, 0: None
18	CAN1 5V fail	1: Fault, 0: None
17	Backplane 24V B-side fail	1: Fault, 0: None
16	Backplane 24V A-side fail	1: Fault, 0: None
15		
14		
13		
12		
11		
10		
9		
8		
7		
6		
5		
4		
3		
2	Channel break-off	1: Fault, 0: None
1	CJC error	1: Fault, 0: None
0	Cable break-off	1: Fault, 0: None

Table 4.5 Heavy Emergency

Bit	Description	Remark
31		
30		
29		
28		
27		
26		
25		
24		
23		
22		
21		
20		
19		
18		
17		
16		
15		
14		
13		
12		
11		
10		
9		
8		
7		
6		
5	Secondary side 24V fail	
4	CAN fail	CAN Controller or Lose data
3	Communication module offline	
2	Memory error	EEPROM or FRAM
1	IC error	Setting value error, etc.. 8051 / ADC / DAC / CPLD failure)
0	IC timeout	ADC/DAC/8051 timeout

## 4.3 Slot Information

The slot information contains the description of I/O slot in Modbus addresses. The information, like firmware version, type code, safe value, module type...etc, is provided as well for users. Each slot has own information table and occupies 512 register. The address of the information for the first slot starts from 1025 and uses Modbus function code 0x03 to read.

N = 512 x Slot ID, M = 256 x Slot ID			
Start Address (Decimal)	No. of Points	Description	Remark
N+1025	1	Module ID	Refer to system information
N+1026	1	Module Type	Refer to system information
N+1027	1	I/O slot status	Refer to system information
N+1028	1	Operation mode	Refer to system information
N+1029	1	Emergency	Refer to system information
N+1030	1	AI/AO under limit	Refer to system information
N+1031	1	AI/AO under 2 <sup>nd</sup> limit	Refer to system information
N+1032	1	AI/AO exceed limit	Refer to system information
N+1033	1	AI/AO exceed 2 <sup>nd</sup> limit	Refer to system information
N+1034	1	Firmware version	Ex: 0x000A → v1.0
N+1035	1	Redundant enable flag	0x0000: Disable, 0x0001: Enable
N+1036	1	Cable break-off detect enable	0x0000: Disable, 0x0001: Enable
N+1037	16	DO/AO power-on enable	0x0000: Disable, 0x0001: Preset Each register represents 1 channel
N+1053	16	DO/AO/PWM safety enable	0x0000: Disable 0x0001: Preset 0x0002: Hold Each register represents 1 channel
N+1069	16	DO/AO power-on value	DO: Each channel takes 1 bit (1 <sup>st</sup> register) AO: Each channel takes 1 register
N+1085	32	DO/AO safety value	DO: Each channel takes 1 bit (1 <sup>st</sup> register) AO: Each channel takes 1 register
N+1117	16	Type code	Refer to <a href="#">Table of Type code</a>
N+1133	16	TC/RTD: Sensor low limit PWM: Cyclic steps	
N+1149	16	TC/RTD: Sensor high limit PWM: Duty step	
N+1165	16	AI/AO: Low limit alarm PWM: Offset timer	Each channel takes 1 register
N+1181	16	AI/AO: High limit alarm	Each channel takes 1 register

N+1197	1	AI/AO alarm enable	0x0000: Disable, 0x0001: Enable
N+1198	1	CJC enable	0x0000: Disable, 0x0001: Enable
N+1199	1	CJC offset value	
N+1200	1	TC/RTD channel broken detection enable	Each channel takes 1 bit 0: Disable, 1: Enable
N+1201	1	TC/RTD channel broken redundant switch	Each channel takes 1 bit 0: Disable, 1: Enable
N+1202	1	Counter filter enable	Each channel takes 1 bit 0: Disable, 1: Enable
N+1203	1	Counter frequency mode	Each channel takes 1 bit 0: 0.33 Sec, 1: 0.1 Sec
N+1204	1	Counter edge mode	Each channel takes 2 bits 0: Raising, 1: Falling, 2: Both
N+1205	2	Counter filter interval	1~32767 ms
N+1207	1	Counter input impedance	Each channel takes 2 bits 0: None, 1: 200 $\Omega$ , 2: 500 $\Omega$ , 3: 1000 $\Omega$
N+1208	1	Counter type	Each channel takes 1 bit 0: limited to 0x7FFF, 1: limited to 0xFFFF
N+1209	16	PWM base time	Each channel takes 1 register 5~65535 ms
N+1225	2	Light Emergency	Refer to system information
N+1227	2	Heavy Emergency	Refer to system information
M+5121	1	HART process status	Status of HART transaction process
M+5122	1	HART process error code	Error code of HART transaction process
M+5123	1	HART response data length	Response length of HART transaction
M+5124	253	HART response data	Response data of HART transaction

## Section 5 Configuration Command

### 5.1 System configuration command

There are large amounts of configuration to the RIO-9830 system. In order to configure these configurations, RCM-MTCP provides a configuring channel in Modbus which is located on start address 0x9000. The list of configuration is as following table.

Start Address	Index	Description	Section
0x9000	0x0000	RTC time	<a href="#">5.1.1</a>



### 5.1.1 RTC time (0x0000)

#### Query

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x10
2~3	Start Address	2	0x90 0x00
4~5	Number of Point	2	0x00 0x08
6	Byte Count	1	0x10
7~8	Index	2	0x00 0x00
9~10	Reserved	2	0x0000
11~22	RTC Time	12	0x07E8: Year (2024) 0x0001: Month (01) 0x000A: Day (10) 0x000F: Hour (15) 0x001E: Minute (30) 0x002D: Second (45)

#### Normal Response

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x10
2~3	Start Address	2	0x90 0x00
4~5	Number of Point	2	0x00 0x08

#### Exception

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x90
2	Exception Code	1	0x03 Incorrect data of received Incorrect number of bytes received

## 5.2 I/O configuration command

There are large amounts of configuration, like type code, alarm low limit...etc, to the RIO-9830 system. These configurations are listed as previous section of slot information. In order to configure these configurations, RCM-MTCP provides a configuring channel in Modbus which is located on start address 0x8000. The list of configuration is as following table.

Start Address	Index	Description	Section
0x8000	0x0000	I/O module port enable	<a href="#">5.2.1</a>
0x8000	0x0001	I/O module slot status	<a href="#">5.2.2</a>
0x8000	0x0010	I/O module redundant enable	<a href="#">5.2.3</a>
0x8000	0x0011	I/O module cable break-off enable	<a href="#">5.2.4</a>
0x8000	0x0020	DO power-on & safety value	<a href="#">5.2.5</a>
0x8000	0x0021	DO power-on & safety mode	<a href="#">5.2.6</a>
0x8000	0x0030	AO power-on value	<a href="#">5.2.7</a>
0x8000	0x0031	AO safety value	<a href="#">5.2.8</a>
0x8000	0x0032	AO power-on & safety mode	<a href="#">5.2.9</a>
0x8000	0x0040	I/O module type code	<a href="#">5.2.10</a>
0x8000	0x0041	TC/RTD low/high re-scaling value	<a href="#">5.2.11</a>
0x8000	0x0042	I/O module alarm low/high limit	<a href="#">5.2.12</a>
0x8000	0x0043	I/O module alarm enable	<a href="#">5.2.13</a>
0x8000	0x0050	TC CJC enable	<a href="#">5.2.14</a>
0x8000	0x0051	Channel broken line detection	<a href="#">5.2.15</a>
0x8000	0x0060	Counter clear	<a href="#">5.2.16</a>
0x8000	0x0061	Counter filter interval	<a href="#">5.2.17</a>
0x8000	0x0062	Counter filter / frequency / edge	<a href="#">5.2.18</a>
0x8000	0x0063	Counter input impedance & limit	<a href="#">5.2.19</a>
0x8000	0x0070	PWM reference time	<a href="#">5.2.20</a>
0x8000	0x0071	PWM offset time	<a href="#">5.2.21</a>
0x8000	0x0072	PWM cyclic & duty	<a href="#">5.2.22</a>
0x8000	0x0073	PWM safety mode	<a href="#">5.2.23</a>

## 5.2.1 I/O module port enable (0x0000)

### Query

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x10
2~3	Start Address	2	0x80 0x00
4~5	Number of Point	2	0x00 0x03
6	Byte Count	1	0x06
7~8	Index	2	0x00 0x00
9~10	Specific Slot	2	Slot: 0x0000~0x0007
11~12	Port Enable	2	0x0000: I/O port disable (Single) 0x0001: I/O port enable (Single) 0x0005: I/O port enable and master (Redundant)

### Normal Response

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x10
2~3	Start Address	2	0x80 0x00
4~5	Number of Point	2	0x00 0x03

### Exception

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x90
2	Exception Code	1	0x03 Incorrect data of received Incorrect number of bytes received

## 5.2.2 I/O module slot status (0x0001)

### Query

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x10
2~3	Start Address	2	0x80 0x00
4~5	Number of Point	2	0x00 0x03
6	Byte Count	1	0x06
7~8	Index	2	0x00 0x01
9~10	Specific Slot	2	Slot: 0x0000~0x0007
11~12	Slot Status	2	0x0001: Pre-operation mode 0x0002: Operation mode

### Normal Response

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x10
2~3	Start Address	2	0x80 0x00
4~5	Number of Point	2	0x00 0x03

### Exception

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x90
2	Exception Code	1	0x03 Incorrect data of received Incorrect number of bytes received

### 5.2.3 I/O module redundant enable (0x0010)

#### Query

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x10
2~3	Start Address	2	0x80 0x00
4~5	Number of Point	2	0x00 0x03
6	Byte Count	1	0x06
7~8	Index	2	0x00 0x10
9~10	Specific Slot	2	Slot: 0x0000~0x0007
11~12	Redundant Enable	2	0x0001: Single 0x0002: Redundant

#### Normal Response

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x10
2~3	Start Address	2	0x80 0x00
4~5	Number of Point	2	0x00 0x03

#### Exception

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x90
2	Exception Code	1	0x03 Incorrect data of received Incorrect number of bytes received

## 5.2.4 I/O module cable break-off enable (0x0011)

### Query

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x10
2~3	Start Address	2	0x80 0x00
4~5	Number of Point	2	0x00 0x03
6	Byte Count	1	0x06
7~8	Index	2	0x00 0x11
9~10	Specific Slot	2	Slot: 0x0000~0x0007
11~12	Break-off enable	2	0x0000: Disable 0x0001: Enable

### Normal Response

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x10
2~3	Start Address	2	0x80 0x00
4~5	Number of Point	2	0x00 0x03

### Exception

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x90
2	Exception Code	1	0x03 Incorrect data of received Incorrect number of bytes received

## 5.2.5 DO power-on & safety value (0x0020)

### Query

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x10
2~3	Start Address	2	0x80 0x00
4~5	Number of Point	2	0x00 0x06
6	Byte Count	1	0x0C
7~8	Index	2	0x00 0x20
9~10	Specific Slot	2	Slot: 0x0000~0x0007
11~14	Power-on value	4	Each channel takes 1 bit
15~18	Safety value	4	Each channel takes 1 bit

### Normal Response

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x10
2~3	Start Address	2	0x80 0x00
4~5	Number of Point	2	0x00 0x06

### Exception

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x90
2	Exception Code	1	0x03 Incorrect data of received Incorrect number of bytes received

## 5.2.6 DO power-on & safety mode (0x0021)

### Query

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x10
2~3	Start Address	2	0x80 0x00
4~5	Number of Point	2	0x00 0x03
6	Byte Count	1	0x06
7~8	Index	2	0x00 0x21
9~10	Specific Slot	2	Slot: 0x0000~0x0007
11	Power-on mode	1	0x00: Disable 0x01: Preset
12	Safety mode	1	0x00: Disable 0x01: Preset 0x02: Hold

### Normal Response

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x10
2~3	Start Address	2	0x80 0x00
4~5	Number of Point	2	0x00 0x03

### Exception

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x90
2	Exception Code	1	0x03 Incorrect data of received Incorrect number of bytes received



## 5.2.7 AO power-on value (0x0030)

### Query

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x10
2~3	Start Address	2	0x80 0x00
4~5	Number of Point	2	0x00 0x04 + N
6	Byte Count	1	0x08 + N*2
7~8	Index	2	0x00 0x30
9~10	Specific Slot	2	Slot: 0x0000~0x0007
11~12	Start channel(K)	2	0x0000~0x000F
13~14	Number of channel(N)	2	0x0001~0x0010
15~16	ChK power-on value	2	Each channel takes 2 bytes
17~18	ChK+1 power-on value	2	
19	...		

### Normal Response

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x10
2~3	Start Address	2	0x80 0x00
4~5	Number of Point	2	0x00 0x04 + N

### Exception

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x90
2	Exception Code	1	0x03 Incorrect data of received Incorrect number of bytes received

## 5.2.8 AO safety value (0x0031)

### Query

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x10
2~3	Start Address	2	0x80 0x00
4~5	Number of Point	2	0x00 0x04 + N
6	Byte Count	1	0x08 + N*2
7~8	Index	2	0x00 0x31
9~10	Specific Slot	2	Slot: 0x0000~0x0007
11~12	Start channel(K)	2	0x0000~0x000F
13~14	Number of channel(N)	2	0x0001~0x0010
15~16	ChK safety value	2	Each channel takes 2 bytes
17~18	ChK+1 safety value	2	
19	...		

### Normal Response

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x10
2~3	Start Address	2	0x80 0x00
4~5	Number of Point	2	0x00 0x04 + N

### Exception

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x90
2	Exception Code	1	0x03 Incorrect data of received Incorrect number of bytes received

## 5.2.9 AO power-on & safety mode (0x0032)

### Query

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x10
2~3	Start Address	2	0x80 0x00
4~5	Number of Point	2	0x00 0x04 + N
6	Byte Count	1	0x08 + N*2
7~8	Index	2	0x00 0x32
9~10	Specific Slot	2	Slot: 0x0000~0x0007
11~12	Start channel(K)	2	0x0000~0x000F
13~14	Number of channel(N)	2	0x0001~0x0010
15	ChKpower-on mode	1	0x00: Disable 0x01: Preset
16	ChK safety mode	1	0x00: Disable 0x01: Preset 0x02: Hold
17	ChK+1 power-on mode	1	
18	ChK+1 safety mode	1	
19~	...		

### Normal Response

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x10
2~3	Start Address	2	0x80 0x00
4~5	Number of Point	2	0x00 0x04 + N

### Exception

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x90
2	Exception Code	1	0x03 Incorrect data of received Incorrect number of bytes received

## 5.2.10 I/O module type code (0x0040)

### Query

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x10
2~3	Start Address	2	0x80 0x00
4~5	Number of Point	2	0x00 0x04 + (N+1)/2
6	Byte Count	1	0x08 + N*2
7~8	Index	2	0x00 0x40
9~10	Specific Slot	2	Slot: 0x0000~0x0007
11~12	Start channel(K)	2	0x0000~0x000F
13~14	Number of channel(N)	2	0x0001~0x0010
15	ChK type code	1	Refer to <a href="#">table of type code</a>
16	ChK+1 type code	1	
17~	...		

### Normal Response

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x10
2~3	Start Address	2	0x80 0x00
4~5	Number of Point	2	0x00 0x04 + (N+1)/2

### Exception

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x90
2	Exception Code	1	0x03 Incorrect data of received Incorrect number of bytes received

## 5.2.11 TC/RTD low/high re-scaling value (0x0041)

## Query

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x10
2~3	Start Address	2	0x80 0x00
4~5	Number of Point	2	0x00 0x04 + N*2
6	Byte Count	1	0x08 + N*4
7~8	Index	2	0x00 0x41
9~10	Specific Slot	2	Slot: 0x0000~0x0007
11~12	Start channel(K)	2	0x0000~0x000F
13~14	Number of channel(N)	2	0x0001~0x0010
15~16	ChK low re-scaling value	2	
17~18	ChK high re-scaling value	2	
19~20	ChK+1 low re-scaling value	2	
21~22	ChK+1 high re-scaling value	2	
23~	...		

## Normal Response

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x10
2~3	Start Address	2	0x80 0x00
4~5	Number of Point	2	0x00 0x04 + N*2

## Exception

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x90
2	Exception Code	1	0x03 Incorrect data of received Incorrect number of bytes received

## 5.2.12 I/O module alarm low/high limit (0x0042)

## Query

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x10
2~3	Start Address	2	0x80 0x00
4~5	Number of Point	2	0x00 0x04 + N*2
6	Byte Count	1	0x08 + N*4
7~8	Index	2	0x00 0x42
9~10	Specific Slot	2	Slot: 0x0000~0x0007
11~12	Start channel(K)	2	0x0000~0x000F
13~14	Number of channel(N)	2	0x0001~0x0010
15~16	ChK low alarm value	2	
17~18	ChK high alarm value	2	
19~20	ChK+1 low alarm value	2	
21~22	ChK+1 high alarm value	2	
23~	...		

## Normal Response

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x10
2~3	Start Address	2	0x80 0x00
4~5	Number of Point	2	0x00 0x04 + N*2

## Exception

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x90
2	Exception Code	1	0x03 Incorrect data of received Incorrect number of bytes received

### 5.2.13 I/O module alarm enable (0x0043)

#### Query

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x10
2~3	Start Address	2	0x80 0x00
4~5	Number of Point	2	0x00 0x03
6	Byte Count	1	0x06
7~8	Index	2	0x00 0x43
9~10	Specific Slot	2	Slot: 0x0000~0x0007
11~12	Alarm Enable	2	0x0000: Disable 0x0001: Enable

#### Normal Response

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x10
2~3	Start Address	2	0x80 0x00
4~5	Number of Point	2	0x00 0x03

#### Exception

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x90
2	Exception Code	1	0x03 Incorrect data of received Incorrect number of bytes received

## 5.2.14 TC CJC enable (0x0050)

### Query

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x10
2~3	Start Address	2	0x80 0x00
4~5	Number of Point	2	0x00 0x04
6	Byte Count	1	0x08
7~8	Index	2	0x00 0x50
9~10	Specific Slot	2	Slot: 0x0000~0x0007
11~12	CJC enable	2	0x0000: Disable 0x0001: Enable
13~14	CJC value	2	CJC value

### Normal Response

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x10
2~3	Start Address	2	0x80 0x00
4~5	Number of Point	2	0x00 0x04

### Exception

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x90
2	Exception Code	1	0x03 Incorrect data of received Incorrect number of bytes received



## 5.2.15 Channel broken line detection (0x0051)

### Query

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x10
2~3	Start Address	2	0x80 0x00
4~5	Number of Point	2	0x00 0x04
6	Byte Count	1	0x08
7~8	Index	2	0x00 0x50
9~10	Specific Slot	2	Slot: 0x0000~0x0007
11~12	Channel Broken Line Detection Enable	2	Each bit represents 1 channel 0: Disable, 1: Enable
13~14	Channel Broken Line Redundant Switch Enable	2	Reserved

### Normal Response

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x10
2~3	Start Address	2	0x80 0x00
4~5	Number of Point	2	0x00 0x04

### Exception

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x90
2	Exception Code	1	0x03 Incorrect data of received Incorrect number of bytes received

## 5.2.16 Counter clear (0x0060)

### Query

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x10
2~3	Start Address	2	0x80 0x00
4~5	Number of Point	2	0x00 0x03
6	Byte Count	1	0x06
7~8	Index	2	0x00 0x60
9~10	Specific Slot	2	Slot: 0x0000~0x0007
11~12	Counter Clear	2	Each bit represents 1 channel 0: No operation, 1: Clear channel counter

### Normal Response

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x10
2~3	Start Address	2	0x80 0x00
4~5	Number of Point	2	0x00 0x03

### Exception

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x90
2	Exception Code	1	0x03 Incorrect data of received Incorrect number of bytes received

## 5.2.17 Counter filter interval (0x0061)

### Query

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x10
2~3	Start Address	2	0x80 0x00
4~5	Number of Point	2	0x00 0x04
6	Byte Count	1	0x08
7~8	Index	2	0x00 0x61
9~10	Specific Slot	2	Slot: 0x0000~0x0007
11~14	Counter Filter Interval	4	1~32767 (us)

### Normal Response

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x10
2~3	Start Address	2	0x80 0x00
4~5	Number of Point	2	0x00 0x04

### Exception

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x90
2	Exception Code	1	0x03 Incorrect data of received Incorrect number of bytes received

## 5.2.18 Counter filter / frequency / edge (0x0062)

### Query

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x10
2~3	Start Address	2	0x80 0x00
4~5	Number of Point	2	0x00 0x05
6	Byte Count	1	0x0A
7~8	Index	2	0x00 0x62
9~10	Specific Slot	2	Slot: 0x0000~0x0007
11~12	Filter enable	2	Each bit represents 1 channel 0: Disable, 1: Enable
13~14	Update time for frequency mode	2	Each bit represents 1 channel 0: 0.33 sec, 1: 0.1 sec
15~16	Counter edge trigger mode	2	2 bits represent 1 channel 0: raising edge trigger 1: falling edge trigger 2: both

### Normal Response

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x10
2~3	Start Address	2	0x80 0x00
4~5	Number of Point	2	0x00 0x05

### Exception

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x90
2	Exception Code	1	0x03 Incorrect data of received Incorrect number of bytes received

## 5.2.19 Counter input impedance & limit (0x0063)

### Query

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x10
2~3	Start Address	2	0x80 0x00
4~5	Number of Point	2	0x00 0x04
6	Byte Count	1	0x08
7~8	Index	2	0x00 0x63
9~10	Specific Slot	2	Slot: 0x0000~0x0007
11~12	Counter input impedance	2	2 bits represent 1 channel 0: highest impedance 1: 200Ω 2: 500Ω 3: 1000Ω
13~14	Counter limit	2	Each bit represents 1 channel 0: 0x7FFF, 1: 0xFFFF

### Normal Response

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x10
2~3	Start Address	2	0x80 0x00
4~5	Number of Point	2	0x00 0x04

### Exception

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x90
2	Exception Code	1	0x03 Incorrect data of received Incorrect number of bytes received

## 5.2.20 PWM reference time (0x0070)

## Query

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x10
2~3	Start Address	2	0x80 0x00
4~5	Number of Point	2	0x00 0x04 + (N+1)/2
6	Byte Count	1	0x08 + N
7~8	Index	2	0x00 0x70
9~10	Specific Slot	2	Slot: 0x0000~0x0007
11~12	Start channel(K)	2	0x0000~0x000F
13~14	Number of channel(N)	2	0x0001~0x0010
15	ChK reference time	1	(ms)
16	ChK+1 reference time	1	(ms)
17	...		

## Normal Response

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x10
2~3	Start Address	2	0x80 0x00
4~5	Number of Point	2	0x00 0x04 + (N+1)/2

## Exception

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x90
2	Exception Code	1	0x03 Incorrect data of received Incorrect number of bytes received

## 5.2.21 PWM offset time (0x0071)

### Query

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x10
2~3	Start Address	2	0x80 0x00
4~5	Number of Point	2	0x00 0x04 + (N+1)/2
6	Byte Count	1	0x08 + N
7~8	Index	2	0x00 0x71
9~10	Specific Slot	2	Slot: 0x0000~0x0007
11~12	Start channel(K)	2	0x0000~0x000F
13~14	Number of channel(N)	2	0x0001~0x0010
15	ChK offset time	1	(ms)
16	ChK+1 offset time	1	(ms)
17	...		

### Normal Response

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x10
2~3	Start Address	2	0x80 0x00
4~5	Number of Point	2	0x00 0x04 + (N+1)/2

### Exception

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x90
2	Exception Code	1	0x03 Incorrect data of received Incorrect number of bytes received

## 5.2.22 PWM cyclic & duty (0x0072)

### Query

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x10
2~3	Start Address	2	0x80 0x00
4~5	Number of Point	2	0x00 0x04 + N*2
6	Byte Count	1	0x08 + N*4
7~8	Index	2	0x00 0x72
9~10	Specific Slot	2	Slot: 0x0000~0x0007
11~12	Start channel(K)	2	0x0000~0x000F
13~14	Number of channel(N)	2	0x0001~0x0010
15~16	ChK cyclic step	2	
17~18	ChK duty step	2	
19~20	ChK+1 cyclic step	2	
21~22	ChK+1 duty step	2	
23	...		

### Normal Response

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x10
2~3	Start Address	2	0x80 0x00
4~5	Number of Point	2	0x00 0x04 + N*2

### Exception

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x90
2	Exception Code	1	0x03 Incorrect data of received Incorrect number of bytes received



### 5.2.23 PWM safety mode (0x0073)

#### Query

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x10
2~3	Start Address	2	0x80 0x00
4~5	Number of Point	2	0x00 0x04 + N
6	Byte Count	1	0x08 + N*2
7~8	Index	2	0x00 0x73
9~10	Specific Slot	2	Slot: 0x0000~0x0007
11~12	Start channel(K)	2	0x0000~0x000F
13~14	Number of channel(N)	2	0x0001~0x0010
15~16	ChK safety mode	2	0x0000: Diable 0x0002: Hold
17~18	ChK+1 safety mode	2	
19	...		

#### Normal Response

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x10
2~3	Start Address	2	0x80 0x00
4~5	Number of Point	2	0x00 0x04 + N

#### Exception

Byte Index	Description	Length (Byte)	Remark
0	Slave Address	1	0x01
1	Function Code	1	0x90
2	Exception Code	1	0x03 Incorrect data of received Incorrect number of bytes received

# Appendix A

## Analog Input Type Code

Code	Input Type	Code	Input Type
0x00	-15 mV ~ +15 mV	0x17	Type L TC, -200 ~ +800°C
0x01	-50 mV ~ + 50 mV	0x18	Type M TC, -200 ~ +100°C
0x02	-100 mV ~ +100 mV	0x19	Type L <sub>DIN43710</sub> TC, -200 ~ +900°C
0x03	-500 mV ~ +500 mV	0x1A	0 ~ +20 mA
0x04	-1 V ~ +1 V	0x1B	-150 V ~ +150 V
0x05	-2.5 V ~ +2.5 V	0x1C	-50 V ~ +50 V
0x06	-20 mA ~ +20 mA	0x20	Pt 100, $\alpha=.00385$ , -100 ~ +100°C
0x07	+4 mA ~ +20 mA	0x21	Pt 100, $\alpha=.00385$ , 0 ~ +100°C
0x08	-10 V ~ +10 V	0x22	Pt 100, $\alpha=.00385$ , 0 ~ +200°C
0x09	-5 V ~ +5 V	0x23	Pt 100, $\alpha=.00385$ , 0 ~ +600°C
0x0A	-1 V ~ +1 V	0x24	Pt 100, $\alpha=.003916$ , -100 ~ +100°C
0x0B	-500 mV ~ +500 mV	0x25	Pt 100, $\alpha=.003916$ , 0 ~ +100°C
0x0C	-150 mV ~ +150 mV	0x26	Pt 100, $\alpha=.003916$ , 0 ~ +200°C
0x0D	-20 mA ~ +20 mA	0x27	Pt 100, $\alpha=.003916$ , 0 ~ +600°C
0x0E	Type J TC, -210 ~ +760°C	0x28	Nickel 120, -80 ~ +100°C
0x0F	Type K TC, -210 ~ +1372°C	0x29	Nickel 120, 0 ~ +100°C
0x10	Type T TC, -270 ~ +400°C	0x2A	Pt 1000, $\alpha=.00392$ , -200 ~ +600°C
0x11	Type E TC, -270 ~ +1000°C	0x2B	Cu 100, $\alpha=.00421$ , -20 ~ +150°C
0x12	Type R TC, 0 ~ +1768°C	0x2C	Cu 100, $\alpha=.00427$ , 0 ~ +200°C
0x13	Type S TC, 0 ~ +1768°C	0x2D	Cu 1000, $\alpha=.00421$ , -20 ~ +150°C
0x14	Type B TC, 0 ~ +1820°C	0x2E	Pt 100, $\alpha=.00385$ , -200 ~ +200°C
0x15	Type N TC, -270 ~ +1300°C	0x2F	Pt 100, $\alpha=.003916$ , -200 ~ +200°C
0x16	Type C TC, 0 ~ +2320°C		

## Analog Output Type Code

Code	Input Type
0x30	0 ~ +20 mA
0x31	4 ~ +20 mA
0x32	0 V ~ +10 V
0x33	-10 V ~ +10 V
0x34	0 V ~ +5 V
0x35	-5 V ~ +5 V

## Pulse Input Type Code

Code	Input Type
0x50	Up counter
0x51	Frequency
0x52	Counter with battery backup
0x53	Encoder
0x54	Up/Down counter
0x55	Pulse/Direction counter
0x56	AB phase

## Appendix B


### How to modify IP address

#### Normal mode

The default IP/Gateway/Mask and Modbus NetID of RCM-MTCP is:

IP	192.168.0.16
Subnet Mask	255.255.0.0
Gateway	192.168.0.1
Modbus Slave Address	1

RCM-MTCP dip switch positions 5 and 6 are set to OFF and then powered on, it will enter normal mode. In this mode, users can customize IP without being restricted by rotary switch. If you want to modify the 1<sup>st</sup> to the 4<sup>th</sup> section IP address, the MiniOS7 utility tool is required to do this.

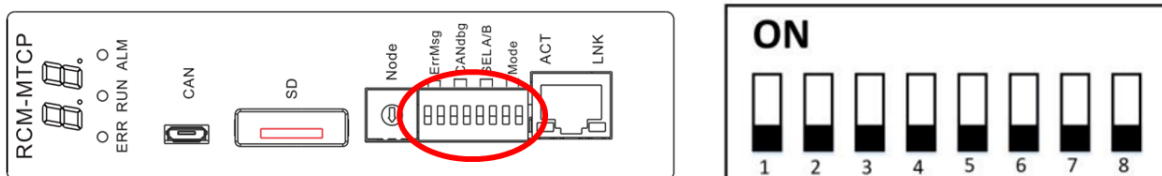


#### Hardware mode

The rotary switch, Node is used to configure the 4th-section IP address (from 16 to 31 or 144 to 159) of the RCM-MTCP. Setting the 4th-section IP address will cause a heavy fault in the RCM-MTCP. If you want to modify the 1<sup>st</sup> to the 3<sup>rd</sup> section IP address, the MiniOS7 utility tool is required to do this.

The following example shows you what this rotary switch means.


##### Example 1:

Powering off the RIO-9830 and switching the Node to 'A' respectively. After powering on the RIO-9830, the IP address of RCM-MTCP will be "192.168.255.26"

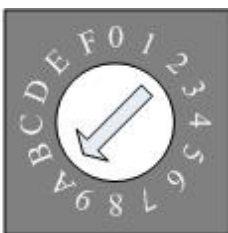

##### Example 2:

Switching the Node to '0' respectively, the IP address of RCM-MTCP will be "192.168.255.16"

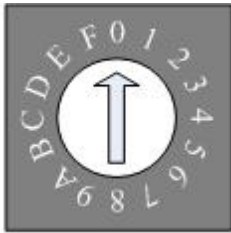

Then the following article will teach you how to modify the 1<sup>st</sup> to 3<sup>rd</sup> IP address of the RCM-MTCP.

### Step1: Get the MiniOS7 Utility tool

MiniOS7 Utility tool is useful while you want to update the IP address of your RCM-MTCP. This tool can be obtained from:


[http://ftp.icpdas.com/pub/cd/8000cd/napdos/minios7/utility/minios7\\_utility/](http://ftp.icpdas.com/pub/cd/8000cd/napdos/minios7/utility/minios7_utility/)

After installing MiniOS7 Utility, there will two ways to modify IP address of RCM-MTCP.

### Modifying IP address from Ethernet


#### Step1: Connect PC with the RIO-9830 via the Ethernet port

Power off the RIO-9830, connect the PC with the RIO-9830 via the Ethernet port, and power on the RIO-9830. The Ethernet switch or hub may be needed while you connect the PC with the RIO-9830.

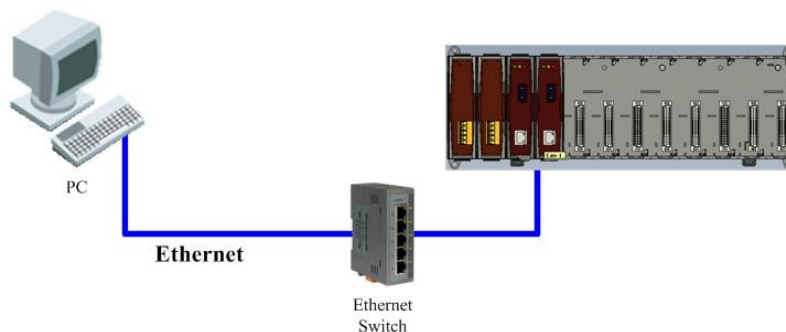

#### Step2: Start the MiniOS7 Utility tool

Double click the MiniOS7 Utility icon on the desktop to execute it.

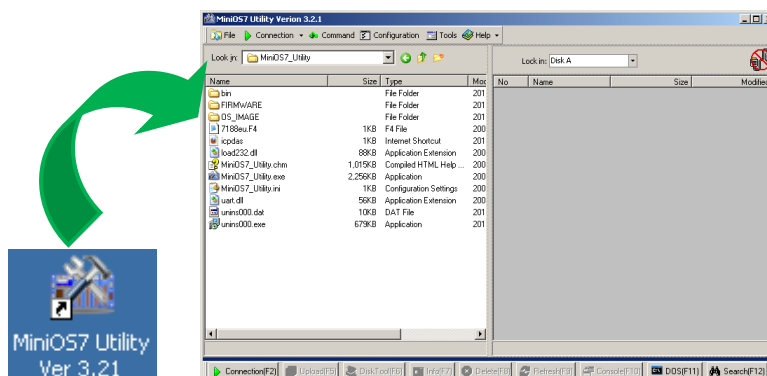


**Step3:** Search the RCM-MTCP device and modify the IP address


Click the “Search” button on the bottom left corner of the MiniOS7 utility tool.



Select the RCM-MTCP by using current IP address, and click the “IP setting” button to modify the IP address.

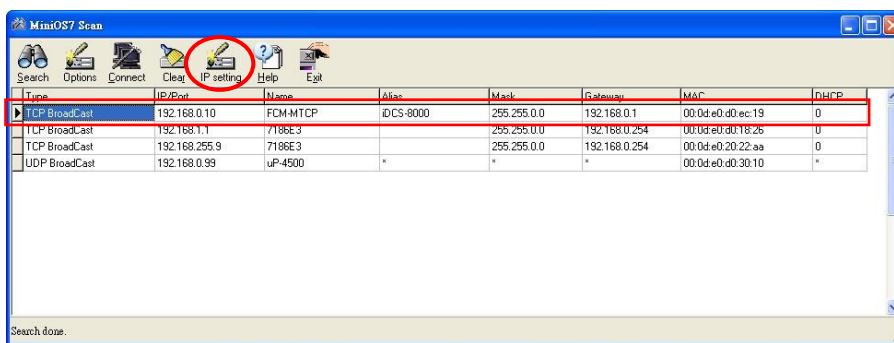

Modify the IP/Gateway/Mask

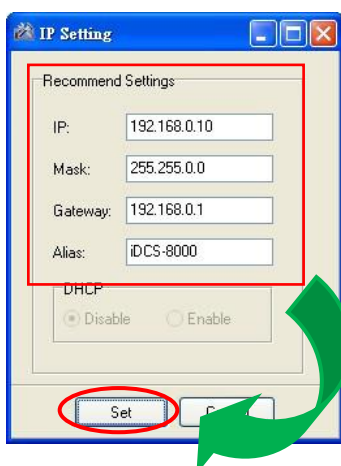**Step4:** Reboot the RIO-9830

After finishing the IP configuration, power off the RIO-9830 and power it on. It will boot up with the IP address modified before and the 4th-section IP address will follow the setting of SW1 and SW2 rotary switches.

## How to update the RCM-MTCP firmware

While you have some special requirements or have some troubles during setting up your system, updating the firmware of the RCM-MTCP may be needed. ICP DAS will continue releasing more and more features into the newer firmware. You can download the latest version firmware from the ICP DAS web site. If your system works well, it is not necessary to update the firmware of your RCM-MTCP. When you want to update the firmware, please refer to the following steps.

### Step1: Get the RCM-MTCP FW upgrade tool


The latest version of tool can be obtained from: <https://www.icpdas.com/en/product/RCM-MTCP>

### Step2: Get the RCM-MTCP Module firmware (.hex)


The latest version of firmware can be obtained from: <https://www.icpdas.com/en/product/RCM-MTCP>

### Step3: Connect PC with the RIO-9830 via the Ethernet port

Power off the RIO-9830, connect the PC with the RCM-MTCP via the Ethernet port.

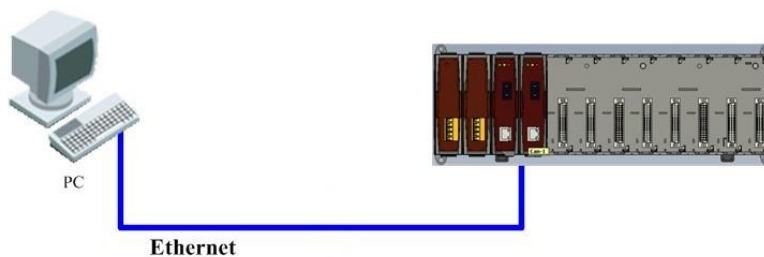




Adjust dip-switch as shown below, and power on the RIO-9830.

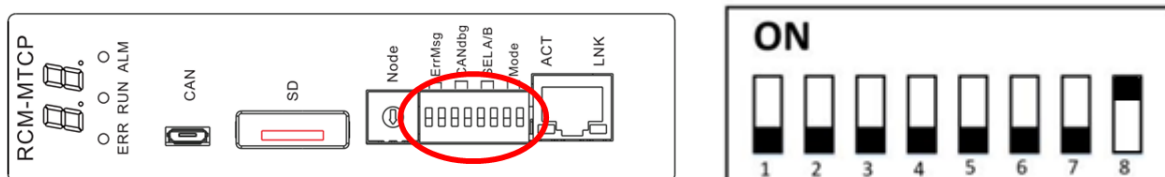

**Step4:** After connecting the PC and RCM-MTCP via Ethernet, use "System Administrator Permissions" to execute "RCM-MTCP BootLoader Mode.bat"



RCM-MTCP  
BootLoader  
Mode.bat

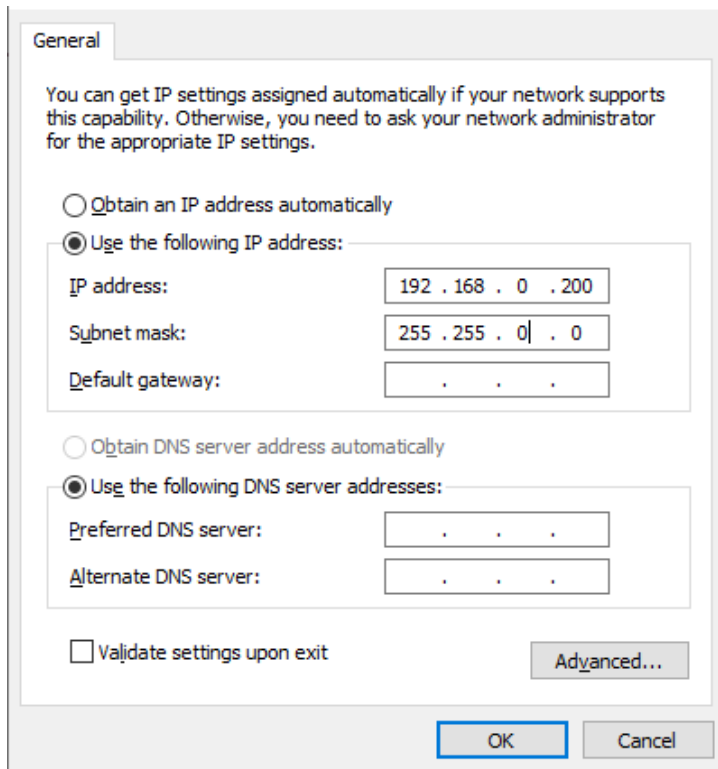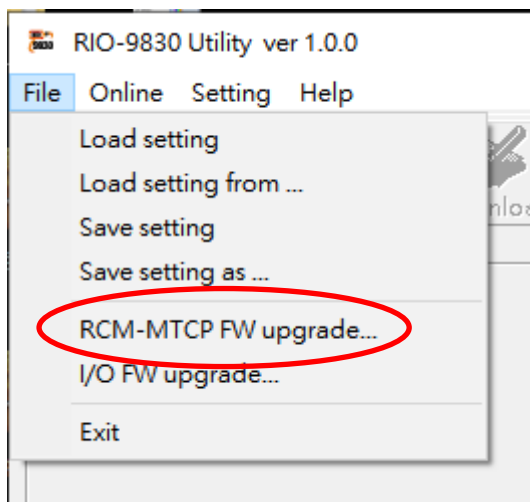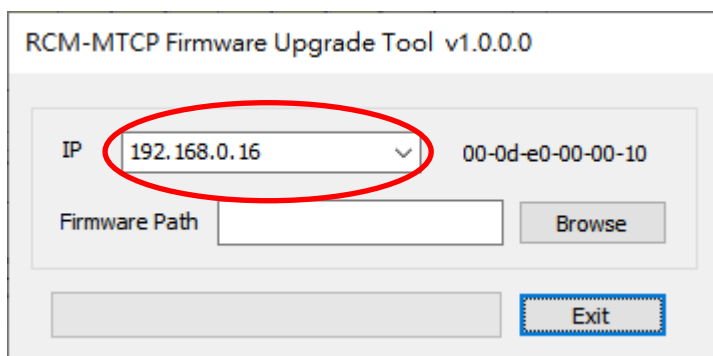**Step5:** Configure the network settings on PC**Step6:** Start the RIO-9830 RCM-MTCP firmware upgrade tool**Step7:** Select IP address




**Step8:** Configure upgrade tool


Set the IP Address parameters on RIO-9830 RCM-MTCP firmware upgrade tool according to the values corresponding to the Node Rotary Switch of RCM-MTCP and Slot0/1 of RCM-MTCP in the table below.

Slot	Node Rotary Switch Value	IP Address	MAC Address
0	0	192.168.0.16	00-0d-e0-00-00-10
0	1	192.168.0.17	00-0d-e0-00-00-11
0	2	192.168.0.18	00-0d-e0-00-00-12
0	3	192.168.0.19	00-0d-e0-00-00-13
0	4	192.168.0.20	00-0d-e0-00-00-14
0	5	192.168.0.21	00-0d-e0-00-00-15
0	6	192.168.0.22	00-0d-e0-00-00-16
0	7	192.168.0.23	00-0d-e0-00-00-17
0	8	192.168.0.24	00-0d-e0-00-00-18
0	9	192.168.0.25	00-0d-e0-00-00-19
0	A	192.168.0.26	00-0d-e0-00-00-1a
0	B	192.168.0.27	00-0d-e0-00-00-1b
0	C	192.168.0.28	00-0d-e0-00-00-1c
0	D	192.168.0.29	00-0d-e0-00-00-1d
0	E	192.168.0.30	00-0d-e0-00-00-1e
0	F	192.168.0.31	00-0d-e0-00-00-1f
1	0	192.168.0.144	00-0d-e0-00-00-90
1	1	192.168.0.145	00-0d-e0-00-00-91
1	2	192.168.0.146	00-0d-e0-00-00-92
1	3	192.168.0.147	00-0d-e0-00-00-93
1	4	192.168.0.148	00-0d-e0-00-00-94
1	5	192.168.0.149	00-0d-e0-00-00-95
1	6	192.168.0.150	00-0d-e0-00-00-96
1	7	192.168.0.151	00-0d-e0-00-00-97
1	8	192.168.0.152	00-0d-e0-00-00-98
1	9	192.168.0.153	00-0d-e0-00-00-99
1	A	192.168.0.154	00-0d-e0-00-00-9a
1	B	192.168.0.155	00-0d-e0-00-00-9b
1	C	192.168.0.156	00-0d-e0-00-00-9c
1	D	192.168.0.157	00-0d-e0-00-00-9d
1	E	192.168.0.158	00-0d-e0-00-00-9e
1	F	192.168.0.159	00-0d-e0-00-00-9f


**Step9:** Select firmware file

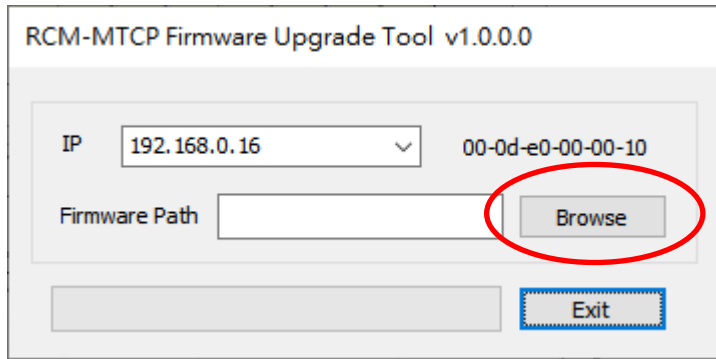

**Step10:** Update the RCM-MTCP firmware

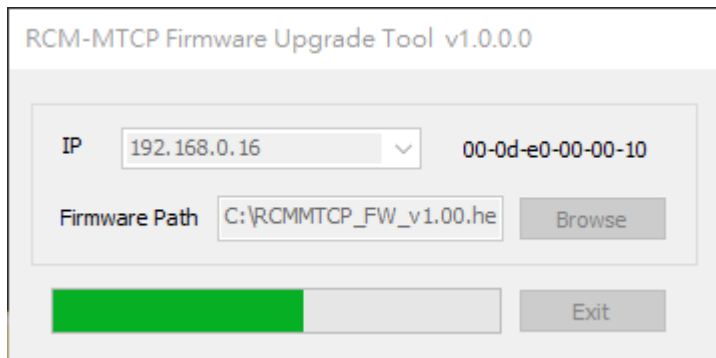

**Step11:** Adjust dip-switch as shown below

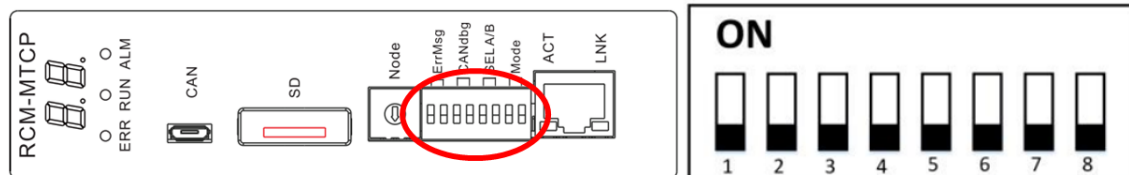

**Step12:** Power on RCM-MTCP again

## How to update the IOM Module firmware

While you have some special requirements or have some troubles during using the I/O module, updating the firmware of the I/O module may be needed. ICP DAS will continue to release more and more features in updated firmware. You can download the latest version firmware from the ICP DAS web site. If your system works well, it is not necessary to update the firmware of your I/O module. When you want to update the firmware of I/O module, please refer to the following steps.

### Step1: Get the RIO-9830 IO FW upgrade tool

The latest version of tool can be obtained from:

<https://www.icpdas.com/en/product/RCM-MTCP>


### Step2: Get the I/O Module firmware (.fw)

The latest version of firmware can be obtained from:


<https://www.icpdas.com/en/product/RCM-MTCP>

### Step3: Connect PC with the RIO-9830 via the Ethernet port


Power off the RIO-9830, connect the PC with the RCM-MTCP via the Ethernet port, and power on the RIO-9830.

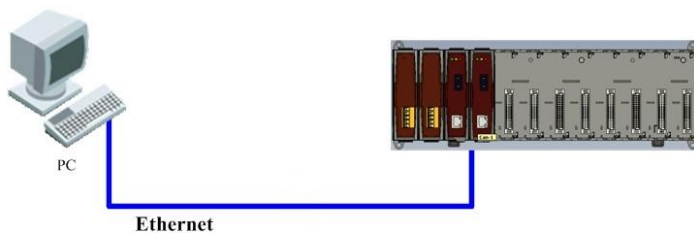


### Step4: Start the RIO-9830 IO FW upgrade tool

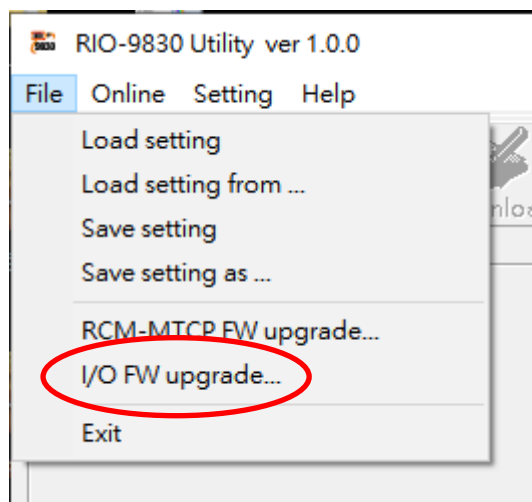


### Step5: Connect RCM-MTCP

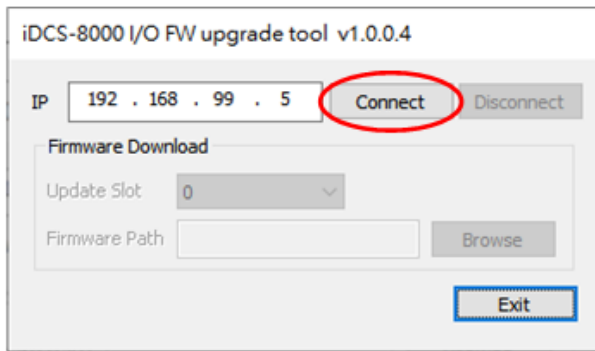

**Step5:** Select I/O Module slot number

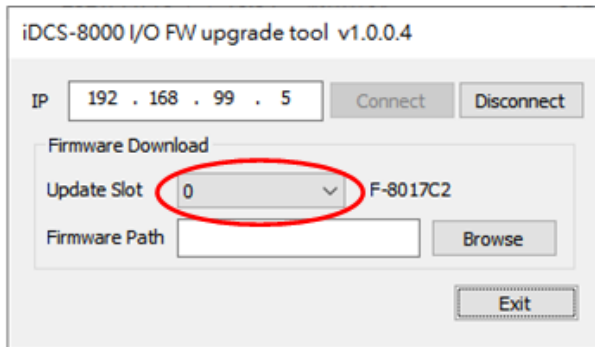

**Step6:** Select the file (.fw) to start updating the firmware of the I/O Module.

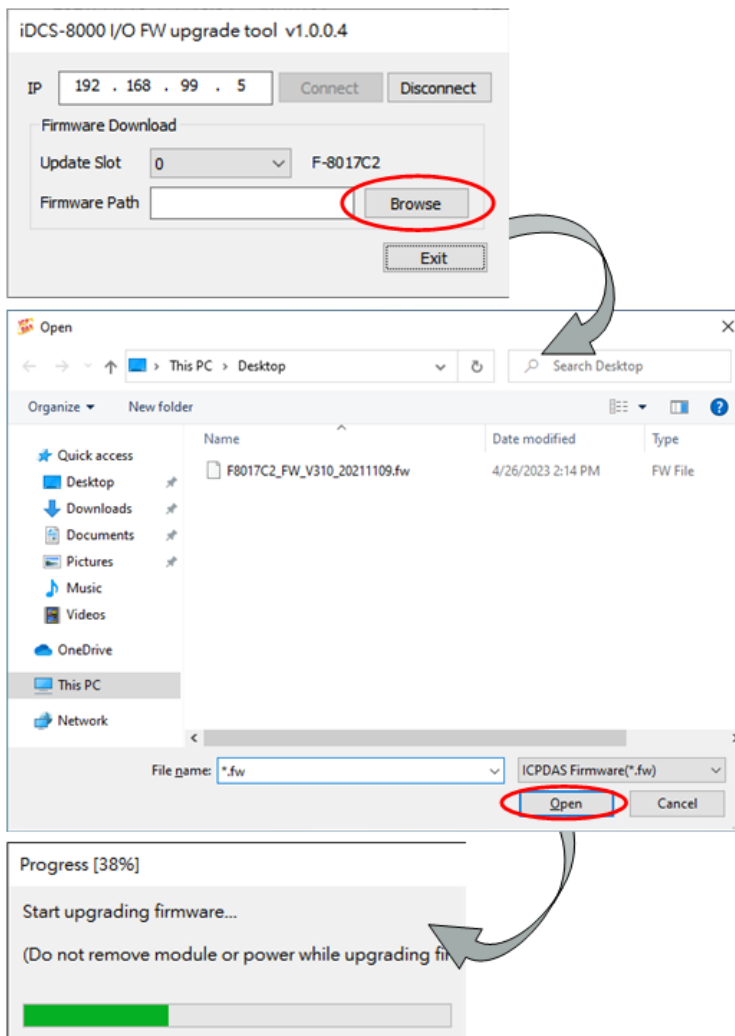

## FAQ

**Q1: What is the maximum number of TCP Client connections?**

**A1:** The maximum number is 12 (10 is recommended).